# **HONDA Fit**

2006-2008



## **KEY-OVERRIDE-ALL**

Web site: http://www.ifar.ca

**ENCRYPTED TRANSPONDER BYPASS MODULE (Self Learning)** 



 
#### Make the connections to the vehicle:

Connector 1 (Black):

- Determin the type of installation:
- INSTALLATION WITH DATA-LINK - INSTALLATION WITHOUT DATA-LINK



Connector 2 (White): Make the connections



Press and hold the programming button. Insert connector 1.

#### Insert connector 2.



If the LED is flashing at this point the module is already programmed and can't be programmed again. (To prevent malicious use this module can be programmed in only one vehicle.)



While holding the programming button.

#### Insert connector 3.



Release the programming button when the LED turns ON.



Press 1 time on the programming button. The LED turns OFF and turns ON.



Press 1 more time on the programming button and the LED will flash once.



Turn the **Ignition to the ON** position.

 


#### If the LED flashes 10 times, the module is programmed.


If the LED stays ON, verify your connections and repeat from step 1.




Turn the Ignition key to the **OFF position.** 



Remove the key and start the vehicle using the remote starter to ensure functionality.

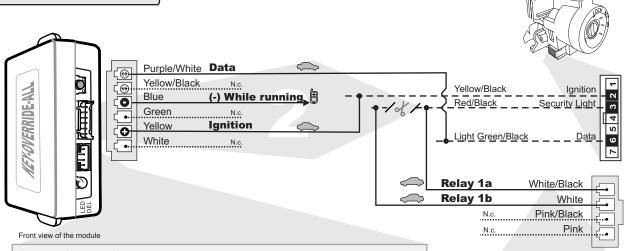

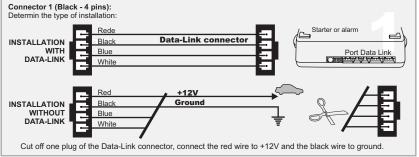

#### Connector 4 (White - 4 pins): Connect with the FLASH LINK UPDATER for web update.

**LED Module Diagnostics:** 

On: Activated. OFF: Not activated. Flash: Not programmed.







INPUT

### ■ Connect wire to Remote-Starter/Alarm Connect wire to vehicle Output Description: Output Descripti

Technical support: TEL: 514-255-HELP (4357) FAX: 514-255-1367 Web: www.ifar.ca

Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects. This module must be install by qualified technician. This instruction guide may change without notice. Visit www.ifar.ca to get latest version.

OUTPUT

膃

NEY-OVERRIDE-ALL

Copyright © 2008, FORTIN AUTO RADIO INC ALL RIGHTS RESERVED

# **HONDA Fit**

2006-2008

#### KEY-OVERRIDE-A MISE À JOUR PAR INTERNET

Site internet http://www.ifar.ca

MODULE DE CONTOURNEMENT DE TRANSPONDER ENCRYPTÉ (Auto-apprentissage)



#### Effectuez les connexions au véhicule:

 
Connecteur 1 (Noir):

- Déterminez le type d'installation: - Pour l'INSTALLATION DATA-LINK
- Pour l'INSTALLATION NON DATA-LINK



Connecteur 2 (Blanc):

Effectuez les branchements.



Maintenez le bouton de programmation enfoncé. Insérez le connecteur 1.

Insérez le connecteur 2.



Si la DEL clignote alors le module a déjà été programmé sur un véhicule et ne peut être programmé à nouveau. (Dans le but de prévenir toute utilisation malicieuse, ce module peut être programmé dans seulement (1) un véhicule.)



Gardez le bouton de programmation enfoncé et insérez le connecteur 3.



Lorsque la DEL s'allume, relâchez le bouton de programmation.



Appuyez 1 fois sur le bouton de programmation. La DEL s'éteint et se rallume.



NEY-OVERRIDE-ALL

Vue de dos du module

Appuyez 1 autre fois sur le bouton de programmation et la DEL clignotera un coup.



Tournez la clef en position ignition (ON).



La DEL clignote 10 fois le MODULE est programmé.


Si la DEL reste allumée, vérifiez vos connexions et recommencez la programmation à partir de l'étape 1.




Tournez la clef à OFF.



Retirez la clé du barillet et démarrez le véhicule avec le démarreur à distance.

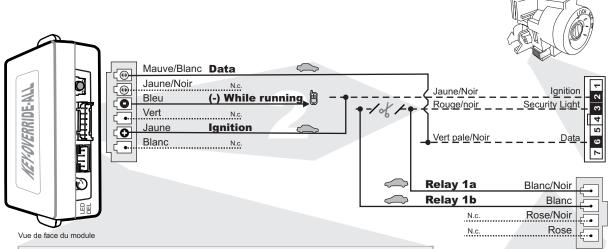

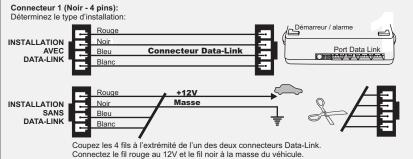

Connecteur 4 (Blanc - 4 pins): Connectez avec le FLASH LINK UPDATER pour les mises à jour par internet.

Diagnostique du DEL du module Allumé: Le module est activé. Éteint: Le module n'est pas activé. Flash: Le module n'est pas programmé.





🖲 Branchement du filage au démarreur à distance/Alarme 🛭 🕽 Branchement du filage au véhicule 🔾 SORTIE 🌑



Support Technique: TEL: 514-255-HELP (4357) FAX: 514-255-1367 Site internet: www.ifar.ca

Ni le manufacturier, ni le distributeur ne se considèrent responsables des dommages causés ou ayant pu être causés, indirectement ou directement, par ce module, excepté le remplacement de ce module en cas de défectuosité de fabrication. Ce module doit être installé par un technicien qualifié. Ce quide d'instruction peut faire l'objet de changement sans préavis. Consultez le www.ifar.ca pour voir la plus récente version.