


# KEY-OVERRIDE-SL

P&D

## ENCRYPTED TRANSPONDER BYPASS MODULE FOR FORD, MERCURY, LINCOLN & MAZDA ( Self Learning )

## INSTALLATION FOR FORD MERCURY, LINCOLN & MAZDA

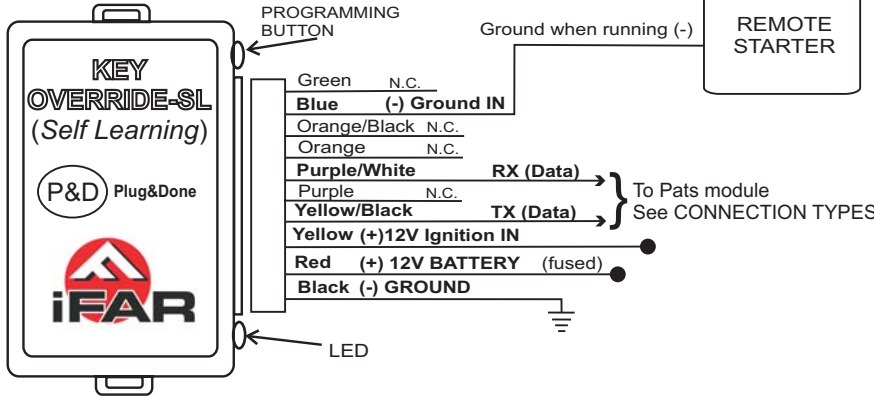

**\*\*Before starting the programming procedure\*\***  
 Only 1 key is required for the vehicles identify with rond sign (○) and two 2 keys for the vehicles identify with rectangular sign (□) see opposite table. Keep the keys separate while programming. Each step must be completed in the indicated delay, otherwise the KEY-OVERRIDE-SL module will not be programmed and it will be necessary to restart the procedure.

### PROGRAMMING PROCEDURE :

Once the connections are done.  
 Keep programming button pressed while inserting the wire harness into the KEY-OVERRIDE-SL module. Release the programming button when the LED turns ON.  
 If the LED is flashing at this point the KEY-OVERRIDE-SL module is already programmed and can't be programmed again.

1 - Insert the first functional key into the ignition barrel and turn the ignition ON. When the security light turns OFF, turn the key to the OFF position and remove the first key from the barrel. For the vehicles identify with rond sign (1 key) go to step 4.

2 - Within five (5) seconds insert the second functional key into the ignition barrel and turn the ignition ON. When the security light turns OFF, turn the key to the OFF position and remove the second key from the barrel.

### For Automatic Transmission:

3 - Within ten (10) seconds of turning the second key OFF, activate the start function of the remote starter with the KEY-OVERRIDE-SL connected. The module is now programmed.

### For MANUAL Transmission:

3 - Within ten (10) seconds of turning the second key OFF, press and release the programming button and with a jumper wire, apply power (12v) to the vehicles ignition wire until the security light turns OFF. Remove the jumper. The module is now programmed.

4 - If the MODULE is programmed, the LED will flash 10 times. If the MODULE is not programmed, the LED will turns ON, repeat from step 1.

### LED Diagnostics :

LED ON : Module powered & Ground IN(-)

LED FLASH : Module powered and not programmed

### PATS CONNECTION TYPES & VEHICLE COMPATIBILITY

Vehicles	1997	1998	1999	2000	2001	2002	2003	2004	2005	2006	2007	2008
Aviator							B	B	B	B		
Blackwood				A	A	A	C	C	C			
Continental	A	A	A	A	A	A						
Contour		B	B	B	B							
Cougar			B	B	B	B	B					
Crown Victoria	A	A	A	A	A	A	C	C	E	E	E	
Edge												D
Escape				B	B	B	B	B	B	B	B	B
Excursion				A	A	A	A	C	C			
Expedition	A	A	A	A	A	B	B	B	B	B	B	B
Explorer	A	A	A	A	A	B	B	B	B	E	E	E
F-150			A	A	A	A	C	B	B	B	B	B
Five Hundred									E	E	E	
Focus				B	B	B	B	B	B	B	B	
Freestar							C	C	C	C		
Freestyle									E	E	E	
Fusion										E		
Grand Marquis		A	A	A	A	A	C	C	E	E	E	
Ford GT											B	
Lincoln LS				B	B	B	B	B	B	B		
Marauder							C	C	C			
Mariner								B	B	B	B	
Mark LT											B	
Milan										E		
Montego									E	E	E	
Monterey							C	C	C	C		
Mountaineer		A	A	A	A	B	B	B	B	E		
Mustang	A	A	A	A	A	A	C	C	E	E	E	
Mystique		B	B	B								
Navigator	A	A	A	A	A	B	B	B	B	B	B	B
Ranger			C	C	C	C	C	C	C	C		
Sport Trac					A	B	B	B	B	E	E	
Sable	A	A	A	A	A	A	A	A	A			
Taurus	A	A	A	A	A	A	A	A	A	A	A	
Thunderbird						B	B	B	B			
Town Car	A	A	A	A	A	A	C	C	E	E		
Windstar		A	A	A	A	A	C	C				
Zephyr										E		
Tribute				B	B	B	B	B	B	B		
Mazda 3								D	D	D	D	
Mazda 5										D	D	
Mazda 6								D	D	D	D	
Mazda RX8								D	D	D		
MazdaSpeed 3											E	
MazdaSpeed 6										E		
Mazda MX5										E	E	
B3000-B4000		A	A	A	C	C	C	C	C	C	C	
CX7											D	
Jaguar XJ8												
Jaguar XType												

### VEHICLES CONNECTION TYPES

TYPE A		PINS #	PINS DESCRIPTIONS
		1	GROUND
		2	IGNITION +12V
		3	RX (Data)
		4	TX (Data)
TYPE B		PINS #	PINS DESCRIPTIONS
		1	IGNITION +12V
		2	GROUND
		3	TX (Data)
		4	RX (Data)
TYPE C		PINS #	PINS DESCRIPTIONS
		1	GROUND
		2	IGNITION +12V
		3	RX (Data)
		4	TX (Data)
TYPE D		PINS #	PINS DESCRIPTIONS
		1	RX (Data)
		2	TX (Data)
		3	GROUND
		4	IGNITION +12V
TYPE E		PINS #	PINS DESCRIPTIONS
		1	IGNITION +12V
		2	GROUND
		3	TX (Data)
		4	RX (Data)
<b>JAGUAR</b>		Unknown	

○ = 1 functional key is required for programming  
 □ = 2 functionals keys are required for programming

**Programming procedure for vehicles equipped with Key Remote Card:**  
 Remove all keys from key remote cards and keep the card away from the vehicle (10 feet) to proceed the programming procedure as described at PROGRAMMING PROCEDURE.

### TECHNICAL SUPPORT :

TEL : 514-255-HELP (4357)

FAX: 514-255-1367

[www.ifar.ca](http://www.ifar.ca)

SEE [www.ifar.ca](http://www.ifar.ca)  
 (KEY-OVERRIDE-SL INSTALLATION SUPPLEMENT)  
 FOR CONNECTIONS WIRES COLORS

VERSION : 1.6.h

Revision : June 29, 2007


PAGE 1/4

# KEY-OVERRIDE-SL

P&D

MODULE DE CONTOURNEMENT DE TRANSPONDEUR ENCRYPTÉ  
POUR FORD, MERCURY, LINCOLN et MAZDA ( Self Learning )

INSTALLATION POUR FORD  
MERCURY, LINCOLN & MAZDA

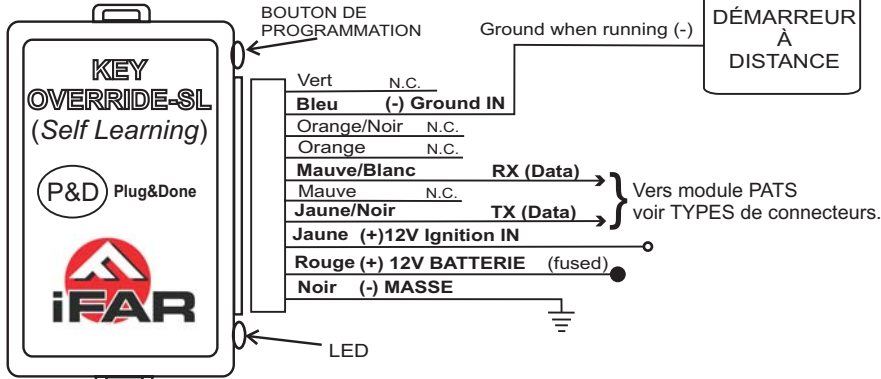

**\*\*AVANT DE COMMENCER LA PROGRAMMATION\*\***  
Une seule clé est requise pour les véhicules identifiés par un rond (○) et 2 clés pour les véhicules identifiés par un rectangle (□) dans le tableau ci-joint. Gardez les clés séparées l'une de l'autre pendant la procédure de programmation. Chaque étape doit être complétée dans le délai indiqué, sans quoi le module Key-Override-SL ne sera pas programmé et il sera nécessaire de recommencer.

**PROGRAMMATION :**  
Une fois les connexions effectuées. Maintenir le bouton de programmation enfoncé et insérez le connecteur dans le module KEY-OVERRIDE-SL. Lorsque la LED s'allume, relâchez le bouton de programmation. Si la LED clignote alors le module à déjà été programmé sur un véhicule et ne peut être programmé à nouveau.

1 - Insérez la clé fonctionnelle #1 dans le barillet et tournez la clé à la position EN MARCHÉ (ON). Lorsque la lumière sécurité du tableau de bord s'éteint, tournez la clé à la position ARRÊT (OFF) et retirez la clé du barillet. Pour les véhicules identifiés par rond, passez à l'étape 4.

2 - Dans les cinq (5) secondes qui suivent insérez la clé #2 et tournez la clé à la position EN MARCHÉ (ON). Lorsque la lumière sécurité du tableau de bord s'éteint, tournez la clé à la position ARRÊT (OFF) et retirez la clé du barillet.

**Pour Transmission Automatique:**  
3 - Dans les dix (10) secondes qui suivent, pesez et relâchez le bouton de programmation et à l'aide d'un fil (jumper) appliquez 12V sur l'ignition du véhicule jusqu'à ce que la lumière sécurité du tableau de bord s'éteigne ce qui termine la programmation.

**Pour Transmission MANUELLE:**  
3 - Dans les dix (10) secondes qui suivent, pesez et relâchez le bouton de programmation et à l'aide d'un fil (jumper) appliquez 12V sur l'ignition du véhicule jusqu'à ce que la lumière sécurité du tableau de bord s'éteigne ce qui termine la programmation. Retirez le fil (jumper).

4 - Si le MODULE est programmé, le LED clignotera 10 fois. Si le MODULE n'est pas programmé, le LED restera allumé et vous devrez recommencer la programmation à l'étape 1.

Diagnostic :  
LED ALLUMÉ : Module alimenté + Ground IN  
LED CLIGNOTE : Module alimenté et non programmé.

## ANNÉES DE COMPATIBILITÉ & TYPES DE CONNECTEURS

Véhicules	1997	1998	1999	2000	2001	2002	2003	2004	2005	2006	2007	2008
Aviator							B	B	B	B		
Blackwood				A	A	A	C	C	C			
Continental	A	A	A	A	A	A						
Contour		B	B	B	B							
Cougar			B	B	B	B	B					
Crown Victoria	A	A	A	A	A	A	C	C	E	E	E	
Edge											D	
Escape				B	B	B	B	B	B	B	B	
Excursion				A	A	A	A	C	C			
Expedition	A	A	A	A	A	B	B	B	B	B	B	
Explorer	A	A	A	A	A	B	B	B	B	E	E	
F-150			A	A	A	A	C	B	B	B	B	
Five Hundred									E	E	E	
Focus				B	B	B	B	B	B	B	B	
Freestar								C	C	C	C	
Freestyle									E	E	E	
Fusion										E		
Grand Marquis		A	A	A	A	A	C	C	E	E	E	
Ford GT											B	
Lincoln LS				B	B	B	B	B	B	B		
Marauder							C	C	C			
Mariner								B	B	B	B	
Mark LT											B	
Milan											E	
Montego									E	E	E	
Monterey								C	C	C	C	
Montaineer		A	A	A	A	B	B	B	B	E		
Mustang	A	A	A	A	A	A	C	C	E	E	E	
Mystique		B	B	B								
Navigator	A	A	A	A	A	B	B	B	B	B	B	B
Ranger			C	C	C	C	C	C	C	C	C	
Sport Trac					A	B	B	B	B	E	E	
Sable	A	A	A	A	A	A	A	A	A			
Taurus	A	A	A	A	A	A	A	A	A	A	A	
Thunderbird						B	B	B	B			
Town Car	A	A	A	A	A	A	C	C	E	E		
Windstar		A	A	A	A	A	C	C				
Zephyr											E	
Tribute				B	B	B	B	B	B	B		
Mazda 3								D	D	D	D	
Mazda 5										D	D	
Mazda 6								D	D	D	D	
Mazda RX8								D	D	D		
MazdaSpeed 3											E	
MazdaSpeed 6											E	
Mazda MX5											E	
B3000-B4000		A	A	A	C	C	C	C	C	C	C	
CX7												D
Jaguar XJ8												
Jaguar XType												

TYPES DE CONNECTEUR DU VÉHICULE

<p><b>TYPE A</b></p>	<table border="1"> <thead> <tr><th>PINS #</th><th>DESCRIPTION DES FILS</th></tr> </thead> <tbody> <tr><td>1</td><td>GROUND</td></tr> <tr><td>2</td><td>IGNITION +12V</td></tr> <tr><td>3</td><td>RX (Data)</td></tr> <tr><td>4</td><td>TX (Data)</td></tr> </tbody> </table>	PINS #	DESCRIPTION DES FILS	1	GROUND	2	IGNITION +12V	3	RX (Data)	4	TX (Data)
PINS #	DESCRIPTION DES FILS										
1	GROUND										
2	IGNITION +12V										
3	RX (Data)										
4	TX (Data)										
<p><b>TYPE B</b></p>	<table border="1"> <thead> <tr><th>PINS #</th><th>DESCRIPTION DES FILS</th></tr> </thead> <tbody> <tr><td>1</td><td>IGNITION +12V</td></tr> <tr><td>2</td><td>GROUND</td></tr> <tr><td>3</td><td>TX (Data)</td></tr> <tr><td>4</td><td>RX (Data)</td></tr> </tbody> </table>	PINS #	DESCRIPTION DES FILS	1	IGNITION +12V	2	GROUND	3	TX (Data)	4	RX (Data)
PINS #	DESCRIPTION DES FILS										
1	IGNITION +12V										
2	GROUND										
3	TX (Data)										
4	RX (Data)										
<p><b>TYPE C</b></p>	<table border="1"> <thead> <tr><th>PINS #</th><th>DESCRIPTION DES FILS</th></tr> </thead> <tbody> <tr><td>1</td><td>GROUND</td></tr> <tr><td>2</td><td>IGNITION +12V</td></tr> <tr><td>3</td><td>RX (Data)</td></tr> <tr><td>4</td><td>TX (Data)</td></tr> </tbody> </table>	PINS #	DESCRIPTION DES FILS	1	GROUND	2	IGNITION +12V	3	RX (Data)	4	TX (Data)
PINS #	DESCRIPTION DES FILS										
1	GROUND										
2	IGNITION +12V										
3	RX (Data)										
4	TX (Data)										
<p><b>TYPE D</b></p>	<table border="1"> <thead> <tr><th>PINS #</th><th>DESCRIPTION DES FILS</th></tr> </thead> <tbody> <tr><td>1</td><td>RX (Data)</td></tr> <tr><td>2</td><td>TX (Data)</td></tr> <tr><td>3</td><td>GROUND</td></tr> <tr><td>4</td><td>IGNITION +12V</td></tr> </tbody> </table>	PINS #	DESCRIPTION DES FILS	1	RX (Data)	2	TX (Data)	3	GROUND	4	IGNITION +12V
PINS #	DESCRIPTION DES FILS										
1	RX (Data)										
2	TX (Data)										
3	GROUND										
4	IGNITION +12V										
<p><b>TYPE E</b></p>	<table border="1"> <thead> <tr><th>PINS #</th><th>DESCRIPTION DES FILS</th></tr> </thead> <tbody> <tr><td>1</td><td>IGNITION +12V</td></tr> <tr><td>2</td><td>GROUND</td></tr> <tr><td>3</td><td>TX (Data)</td></tr> <tr><td>4</td><td>RX (Data)</td></tr> </tbody> </table>	PINS #	DESCRIPTION DES FILS	1	IGNITION +12V	2	GROUND	3	TX (Data)	4	RX (Data)
PINS #	DESCRIPTION DES FILS										
1	IGNITION +12V										
2	GROUND										
3	TX (Data)										
4	RX (Data)										
<p><b>JAGUAR</b></p>	<p>Pas encore défini.</p>										

○ = 1 clé fonctionnelle est requis pour la programmation  
□ = 2 clés fonctionnelles sont requis pour la programmation

Programmation de modèles équipés de clé sans contact (CARTE) : Retirez les 2 clés des télécommandes (CARTES) et éloignez les télécommandes du véhicule (10 pieds) pour procéder à la programmation telle que décrite ci-haut (PROGRAMMATION).

**SUPPORT TECHNIQUE :**  
TEL : 514-255-HELP (4357)  
FAX : 514-255-1367  
[www.ifar.ca](http://www.ifar.ca)

CONSULTEZ LE [www.ifar.ca](http://www.ifar.ca)  
(KEY-OVERRIDE-SL SUPPLÉMENT D'INSTALLATION)  
POUR LES COULEURS DE FILS DES CONNECTEURS.





# KEY-OVERRIDE-SL

P&D

## ENCRYPTED & SMART-KEY TRANSPONDER BYPASS MODULE FOR TOYOTA & LEXUS ( Self Learning ) (Plug & Done)

# INSTALLATION FOR TOYOTA & LEXUS



### VEHICLES COMPATIBILITY & CONNECTIONS TYPES

Vehicles	2002	2003	2004	2005	2006	2007
4 RUNNER		1	1	1	1	1
AVALON			1	1	1	1
CAMRY 4 Cyl.				1	1	1
CAMRY 6 Cyl.			1	1	1	1
CAMRY XLE				1	1	2
CAMRY HYBRID						2
COROLLA				1	1	1
FJ CRUISER						1
HIGHLANDER			1	1	1	1
MATRIX				1	1	1
RAV 4			1	1	1	1
SIENNA			1	1	1	1
SOLARA			1	1	1	1
PRIUS			1	1	1	
TACOMA				1	1	1
YARIS					1	1
ES 330			1	1	1	
ES 350						2
GX 470			1	1	1	
LS 430			1	1	1	1
LX 470			1	1	1	1
RX 330			1	1	1	
RX 350						1
RX 400					1	2
SC 430	1	1	1	1	1	
IS 250					2	2
IS 350					2	2
GS 300 & GS 350					2	2
GS 430					2	
GS 450 & GS 450H						2

### PROGRAMMING CONNECTION TYPE 1

Once the connections are done. Keep programming button pressed while inserting the wire harness into the KEY-OVERRIDE-SL module. Release the programming button when the LED turns ON. **If the LED is flashing at this point the KEY-OVERRIDE-SL module is already programmed and can't be programmed again.**

1 - Insert one functional key into the ignition barrel (do not turn the key).

If the MODULE is programmed, the LED will flash 10 times to show the end of programming.


If the MODULE is not programmed, the LED will turn ON, repeat from step 1.

LED Diagnostics :  
LED ON : Module powered & Ground IN(-)  
LED FLASH : Module powered and not programmed

### PROGRAMMING CONNECTION TYPE 2

Once the connections are done. **Remove the battery** from 1 factory remote and keep the other factory remotes away from the vehicle (10 feet). Keep the **programming button pressed** while inserting the wire harness into the KEY-OVERRIDE-SL module. Release the programming button when the LED turns ON. **If the LED is flashing at this point the KEY-OVERRIDE-SL module is already programmed and can't be programmed again.**


1 - Press the Start-Stop button and keep it press while getting close the factory remote (without battery) to the front of **ENGINE START/STOP button** as show.

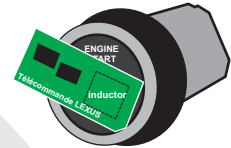

If the MODULE is programmed, the LED of Key-Override-SL will flash 10 times to show the end of programming. Reinstall the battery into factory remote and see the suggest remote starter connections sheet on [www.ifar.ca](http://www.ifar.ca).


If the MODULE is not programmed, the LED will turn ON, repeat from step 1.

### CONNECTION TYPE 1

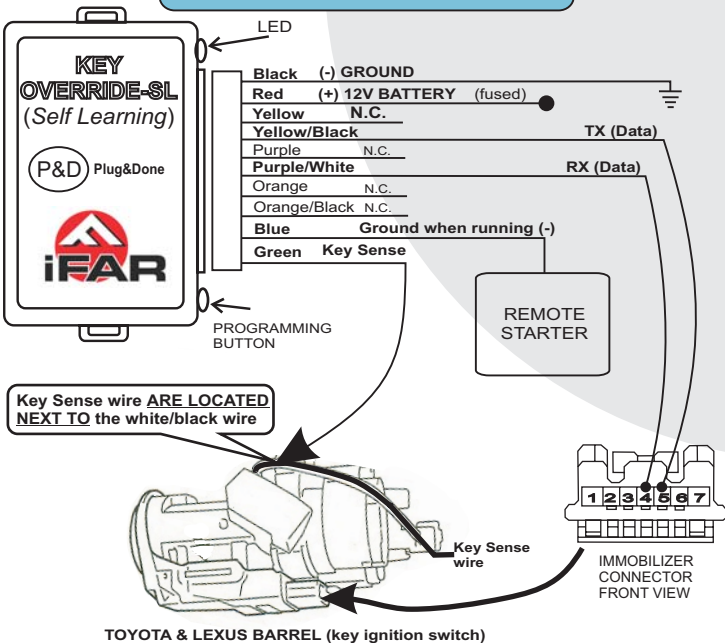

### CONNECTION TYPE 2

Vehicles with SMART KEY equipped

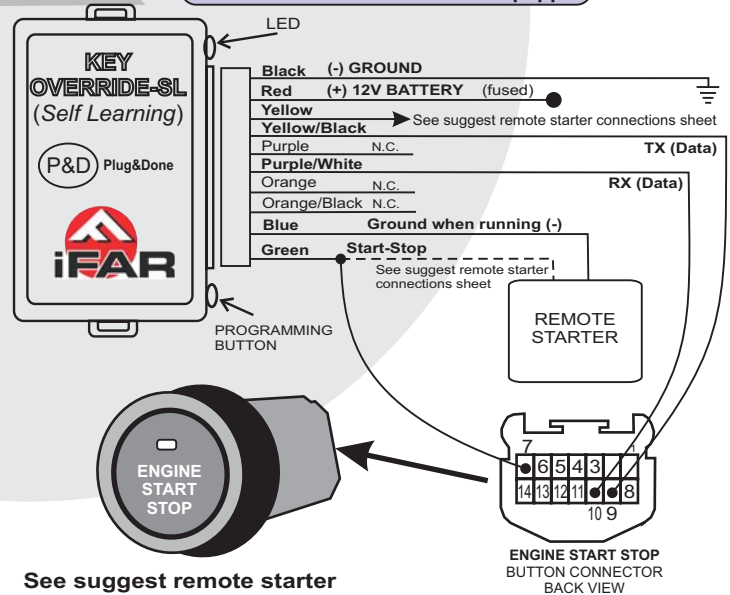

See suggest remote starter connections sheet on [www.ifar.ca](http://www.ifar.ca)

**FUNCTIONING :** After remoted start the vehicle, the Key-Override-SL will stop the engine soon the Ground-Out is remove, this feature will be cancel for 45 secondes when the UNLOCK button is pressed then allow the engine keep on running.

**NOTICE:** Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects. This module must be install by qualifier technician.

**TECHNICAL SUPPORT :**  
TEL : 514-255-HELP (4357)  
FAX: 514-255-1367

[www.ifar.ca](http://www.ifar.ca)

**NOTE:** To prevent malicious use this module can be programmed in only one vehicle.

This instruction manual may change without notice, visite [www.ifar.ca](http://www.ifar.ca) to get latest version.

MADE IN CANADA

VERSION : 1.6h  
Révision : June 29, 2007

PAGE 4/4