

SCAN TOOL REQUIRED

MAZDA 3

2010





KEY-OVERRIDE-ALL

Made in Canada Rev. A - 02 / 07 / 2008
Web site: <http://www.ifar.ca>



ENCRYPTED TRANSPONDER BYPASS MODULE (Self Learning)



LED Module Diagnostics :
On: Activated.
OFF: Not activated.
Flash: Not programmed.

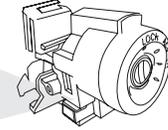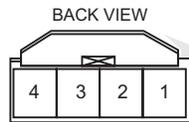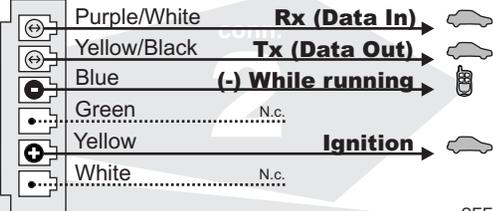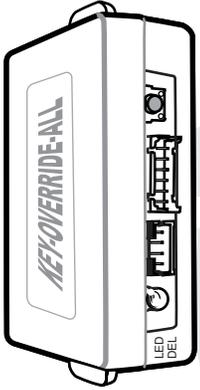


Igniton barrel

PIN #	DESCRIPTION
1	RX (Data)
2	TX (Data)
3	GROUND (N.C.)
4	IGNITION +12V (N.C.)

SEE www.ifar.ca (KEY-OVERRIDE-SL2 INSTALLATION SUPPLEMENT) FOR VEHICLE WIRE COLORS
RX and TX of the module

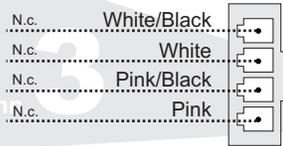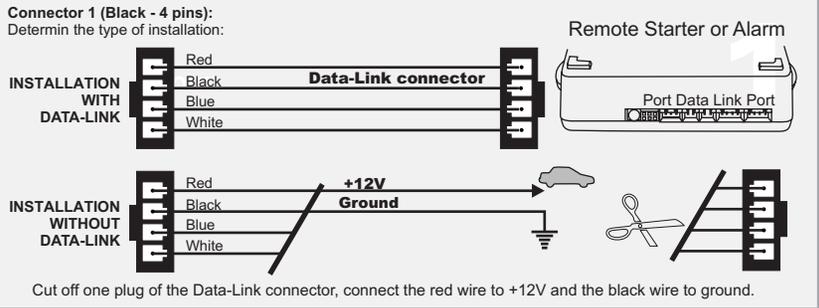

Connector 4 (White - 4 pins):
Connect with the **FLASH LINK UPDATER** for web update.

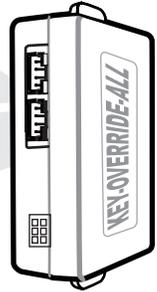

Back view of the module

Connect wire to Remote-Starter/Alarm Connect wire to vehicle

○ OUTPUT ● INPUT

- 1 Make the connections to the vehicle:**
Connector 1 (Black):
 Determine the type of installation:
 - **INSTALLATION WITH DATA-LINK**
 - **INSTALLATION WITHOUT DATA-LINK**

1.A

1.B

1.3

When necessary:
Connector 3 (White, 4 pins): Make the connections
- 2**

Insert the key in to the ignition barrel.
- 3**

Turn ON the ignition with the Push to start button.
Wait one (1) minute.
- 4**

Press and hold the programming button.
 Insert **connector 2**.
- 5**

Insert **connector 1**.
 If the LED is flashing while pressing the programming button the module is already programmed and can't be programmed again. (To prevent malicious use this module can be programmed in only one vehicle.)
- 6**

Release the programming button when the LED turns ON.
- 7**

A DEALER SCAN TOOL IS REQUIRED FOR PROGRAMMING. A QUALIFIED TECHNICIAN AT THE DEALERSHIP SHOULD PERFORM THIS STEP.
 Hook up the scan tool.
 Follow the instructions on the dealer SCAN TOOL to program a **new ignition key** to the vehicle.
- 8**

When the dealer scan tool is ready to program a new key, remove the key from the ignition barrel.
- 9**

Press the programming button on the module.
- 10**

Complete the programming on the dealer scan tool.
The programming is successful when the dealer scan tool indicates that a new ignition key is programmed to the vehicle
- 11**

If the programming is successful the LED will flash 10 times.
The module is now programmed.
 If the LED turns ON solid, repeat at step 1.






Technical support:
TEL: 514-255-HELP (4357)
FAX: 514-255-1367
Web: www.ifar.ca

Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects. This module must be install by qualified technician. This instruction guide may change without notice. Visit www.ifar.ca to get latest version.




MODULE DE CONTOURNEMENT DE TRANSPONDER ENCRYPT  (Auto-apprentissage)

Diagnostic du DEL du module
Allum : Le module est activ .
 teint: Le module n'est pas activ .
Flash: Le module n'est pas programm .

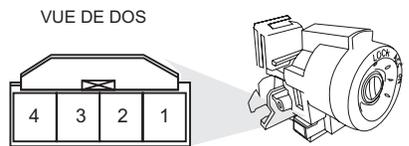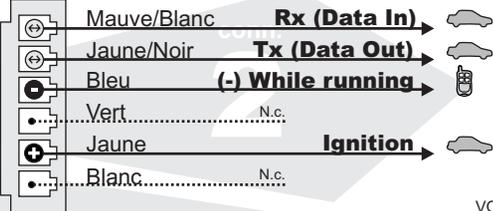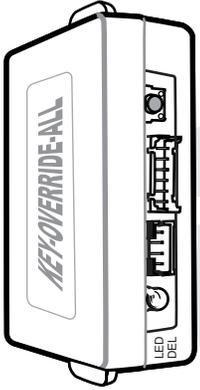


PIN #	DESCRIPTION
1	RX (Data)
2	TX (Data)
3	GROUND (N.C.)
4	IGNITION +12V (N.C.)

VOIR www.ifar.ca (KEY-OVERRIDE-SL2 SUPPL MENT D'INSTALLATION) POUR LES COULEURS DE FILS DES CONNECTEURS. RX et TX du module

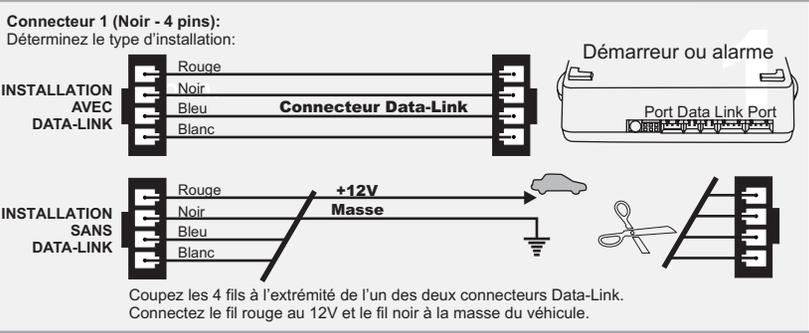

Connecteur 4 (Blanc - 4 pins):
Connectez avec le FLASH LINK UPDATER pour les mises   jour par internet.

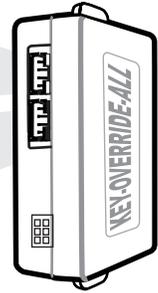

Vue de dos du module

Branchement du filage au d marreur   distance/Alarme Branchement du filage au v hicule SORTIE ENTR E

- Effectuez les connexions au v hicule:**
Connecteur 1 (Noir):
D terminez le type d'installation:
- Pour l'INSTALLATION DATA-LINK
- Pour l'INSTALLATION NON DATA-LINK
- Connecteur 2 (Blanc):** Effectuez les branchements
- Si n cessaire: Connecteur 3 (Blanc, 4 pins):**
Effectuez les branchements.
- Ins rez la cl  dans le barillet d'ignition.
- Tournez   ON l'ignition avec le bouton Push to start.
Attendez (1) une minute.
- Maintenez le bouton de programmation enfonc .
Ins rez le **connecteur 2**.
- Ins rez le **connecteur 1**.
Si la DEL clignote lorsque le bouton est enfonc , module a d j  t programm  sur un v hicule et ne peut  tre programm    nouveau. (Dans le but de pr venir toute utilisation malicieuse, ce module peut  tre programm  dans seulement (1) un v hicule.)
- Lorsque la DEL s'allume, rel chez le bouton de programmation.
- LE SCAN TOOL DU CONCESSIONNAIRE EST REQUIS POUR LA PROGRAMMATION. UN TECHNICIEN QUALIFI  DU CONCESSIONNAIRE DEVRAIT EFFECTUER CETTE  TAPE.**
Branchez le SCAN TOOL
Suivre les indications du SCAN TOOL pour programmer une **nouvelle cl  d'ignition**.
- Lorsque le scan tool du concessionnaire est pr t   programmer la nouvelle cl , retirez la cl  du barillet d'ignition sans  teindre l'ignition.
- Appuyez sur le bouton de programmation du module de contournement.
- Ex cutez la fonction de programmation de la nouvelle cl  indiqu e sur le Scan Tool.
La programmation r ussie lorsque le scan tool indique qu'une nouvelle cl  d'ignition est programm e sur le v hicule.
- Et Si la programmation du module est r ussie le DEL clignotera 10 fois. Le MODULE est programm .**
Si la DEL reste allum e vous devez recommencer la programmation   l' tape 1. Le MODULE n'est pas programm .



Support Technique:
TEL: 514-255-HELP (4357)
FAX: 514-255-1367
Site internet: www.ifar.ca

Ni le manufacturier, ni le distributeur ne se consid rent responsables des dommages caus s ou ayant pu  tre caus s, indirectement ou directement, par ce module, except  le remplacement de ce module en cas de d fectuosit  de fabrication. Ce module doit  tre install  par un technicien qualifi . Ce guide d'instruction peut faire l'objet de changement sans pr avis. Consultez le www.ifar.ca pour voir la plus r cente version.