

ISO 2006

Anti-Démarrreur

FORTIN AUTO RADIO INC.
5540 MÉTROPOLITAIN ST-LÉONARD
QUÉBEC CANADA H1S 1A6

ASSEMBLÉ SOUS / ASSEMBLY UNDER
ISO9001:2000 CERTIFICATION



Fonctionnement:

Pour permettre le démarrage du véhicule, désarmer l'anti-démarrreur en suivant le Mode de Désarmement décrit ci-dessous. Le LED clignotera VERT.

L'anti-démarrreur s'arme automatiquement 30 secondes après l'arrêt du moteur. Le LED clignotera ROUGE. Si il y a une tentative de démarrage pendant que le système est armé, le klaxon se fera entendre.

Mode Valet : Tourner la clé en position IGNITION (ON), appuyez 3 fois de suite le bouton poussoir Valet le LED s'allumera VERT pour indiquer le mode valet. Fermez la clé.

Pour enlever le mode valet, tourner la clé en position IGNITION (ON), appuyez 3 fois de suite le bouton poussoir et fermez la clé.


Note: Ni le manufacturier ni le distributeur ne se considèrent responsable des dommages causés ou ayant dû être causés indirectement ou directement par ce module, excepté le remplacement de ce module en cas de défectuosité de fabrication.

ÉTATS DE LA LED

LED	FONCTIONS
Clignote VERT	Désarmé (pour 30 secondes)
Clignote ROUGE	Armé
VERT	Mode VALET
ÉTEINT	Désarmé et Clé ON (près à démarrer)

MODE DE DÉSARMEMENT

Désarmement + Fil JAUNE	Désarmement - Fil JAUNE/NOIR	RÉSULTATS
MASSE	MASSE	AUCUN
+12 Volts	MASSE	DÉSARMEMENT
MASSE	+12 Volts	AUCUN
+12 Volts	+12 Volts	AUCUN

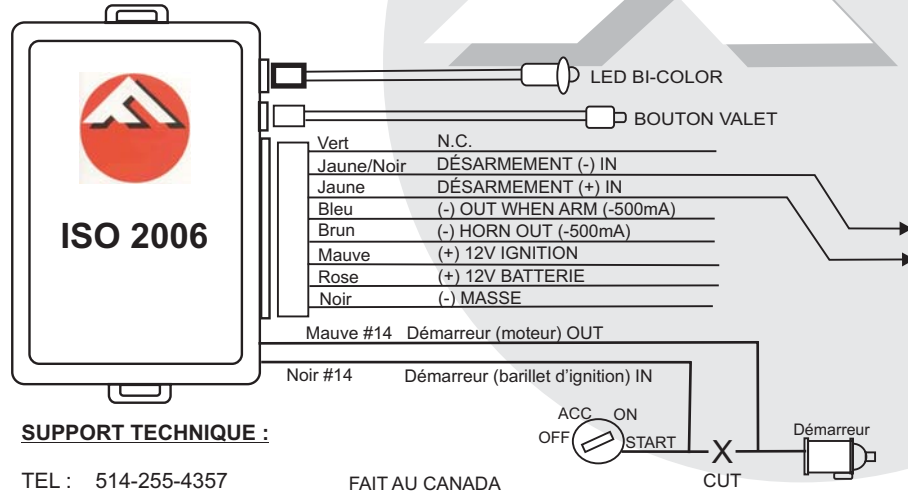

SUPPORT TECHNIQUE :

TEL : 514-255-4357
FAX : 514-255-1367
WEB : www.ifar.ca

FAIT AU CANADA
VERSION 2.0
Juin 2008

ISO 2006

Anti-Démarrreur

FORTIN AUTO RADIO INC.
5540 MÉTROPOLITAIN ST-LÉONARD
QUÉBEC CANADA H1S 1A6

ASSEMBLÉ SOUS / ASSEMBLY UNDER
ISO9001:2000 CERTIFICATION



Fonctionnement:

Pour permettre le démarrage du véhicule, désarmer l'anti-démarrreur en suivant le Mode de Désarmement décrit ci-dessous. Le LED clignotera VERT.

L'anti-démarrreur s'arme automatiquement 30 secondes après l'arrêt du moteur. Le LED clignotera ROUGE. Si il y a une tentative de démarrage pendant que le système est armé, le klaxon se fera entendre.

Mode Valet : Tourner la clé en position IGNITION (ON), appuyez 3 fois de suite le bouton poussoir Valet le LED s'allumera VERT pour indiquer le mode valet. Fermez la clé.

Pour enlever le mode valet, tourner la clé en position IGNITION (ON), appuyez 3 fois de suite le bouton poussoir et fermez la clé.


Note: Ni le manufacturier ni le distributeur ne se considèrent responsable des dommages causés ou ayant dû être causés indirectement ou directement par ce module, excepté le remplacement de ce module en cas de défectuosité de fabrication.

ÉTATS DE LA LED

LED	FONCTIONS
Clignote VERT	Désarmé (pour 30 secondes)
Clignote ROUGE	Armé
VERT	Mode VALET
ÉTEINT	Désarmé et Clé ON (près à démarrer)

MODE DE DÉSARMEMENT

Désarmement + Fil JAUNE	Désarmement - Fil JAUNE/NOIR	RÉSULTATS
MASSE	MASSE	AUCUN
+12 Volts	MASSE	DÉSARMEMENT
MASSE	+12 Volts	AUCUN
+12 Volts	+12 Volts	AUCUN

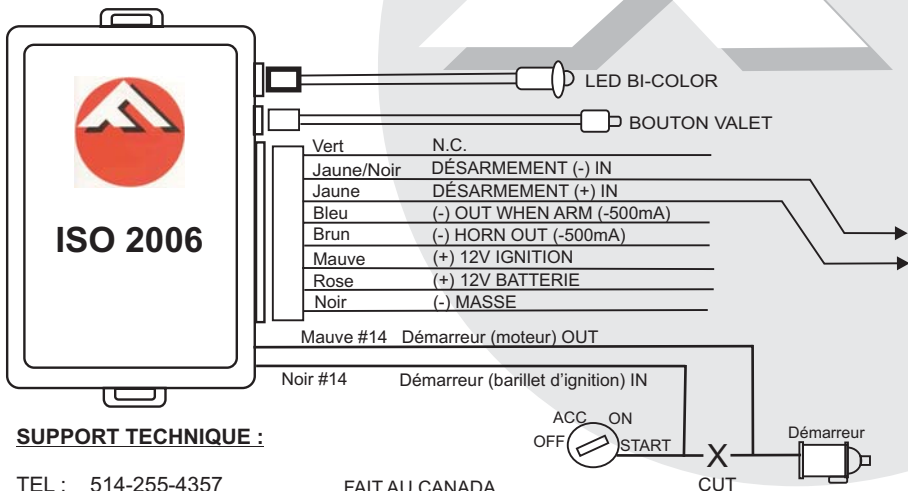


SUPPORT TECHNIQUE :


TEL : 514-255-4357
FAX : 514-255-1367
WEB : www.ifar.ca

FAIT AU CANADA
VERSION 2.0
Juin 2008

BRANCHEMENT POUR TÉLÉCOMMANDE D'ORIGINE

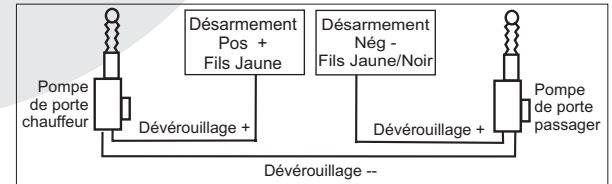

BRANCHEMENT POUR TÉLÉCOMMANDE D'ORIGINE

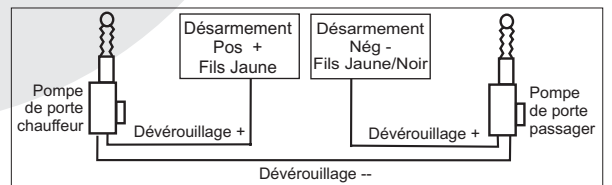

ISO 2006 Starter Kill

FORTIN AUTO RADIO INC.
5540 MÉTROPOLITAIN ST-LÉONARD
QUÉBEC CANADA H1S 1A6

ASSEMBLÉ SOUS / ASSEMBLY UNDER
ISO9001:2000 CERTIFICATION




Operation:

To start the engine you must disarm the starter kill in following the Disarm Mode Chart.
The LED will flash GREEN in disarm mode.
The starter kill will arms by itself automatically 30 secondes after the engine has been shut off.
The LED will flash RED in arm mode.
When the system is arm, the horn output will be activate if someone tries to start the engine.

VALET Mode : Turn the ignition key ON, and press the Valet push button for 3 times, the LED will turn GREEN to indicate the valet mode. Turn off the key.
To remove the valet mode, turn the ignition key ON, and press the Valet push button for 3 times, and turn off the key. The LED will turn to normal operation..

Note: Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects.

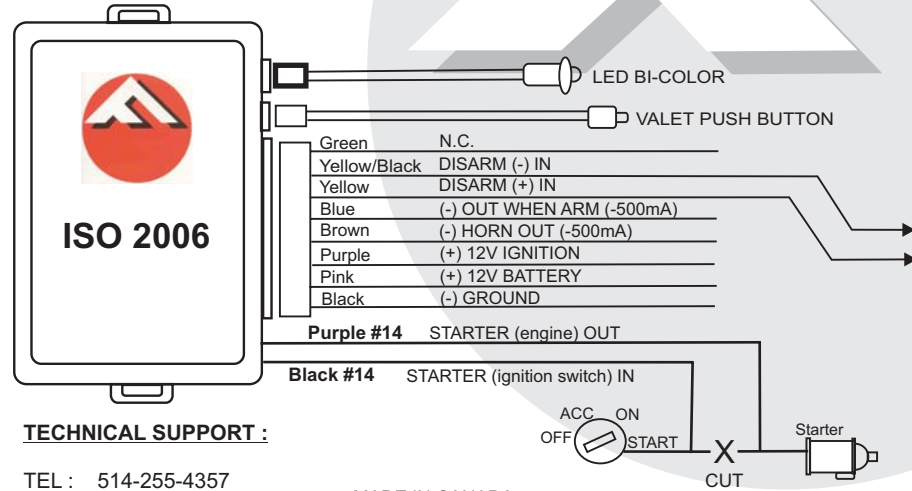

TECHNICAL SUPPORT :

TEL : 514-255-4357
FAX : 514-255-1367
WEB : www.ifar.ca

MADE IN CANADA
VERSION 2.0
JUNE 2008


LED STATUS

LED	FONCTIONS
Flash GREEN	Disarm (for 30 secondes)
Flash Red	Arm
GREEN (steady)	VALET MODE
OFF	Disarm and KEY ON (ready to start)

DISARM MODE

Disarm + Yellow wire	Disarm - Yellow/Black wire	RESULTS
GROUND	GROUND	NO STATUS
+12 Volts	GROUND	DISARM
GROUND	+12 Volts	NO STATUS
+12 Volts	+12 Volts	NO STATUS

CONNECTION WITH FACTORY REMOTE

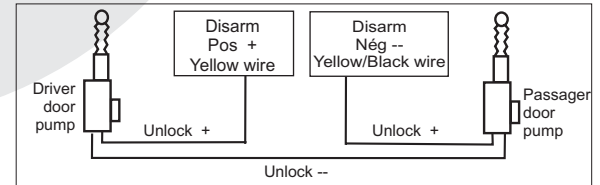

ISO 2006 Starter Kill

FORTIN AUTO RADIO INC.
5540 MÉTROPOLITAIN ST-LÉONARD
QUÉBEC CANADA H1S 1A6

ASSEMBLÉ SOUS / ASSEMBLY UNDER
ISO9001:2000 CERTIFICATION




Operation:

To start the engine you must disarm the starter kill in following the Disarm Mode Chart.
The LED will flash GREEN in disarm mode.
The starter kill will arms by itself automatically 30 secondes after the engine has been shut off.
The LED will flash RED in arm mode.
When the system is arm, the horn output will be activate if someone tries to start the engine.

VALET Mode : Turn the ignition key ON, and press the Valet push button for 3 times, the LED will turn GREEN to indicate the valet mode. Turn off the key.
To remove the valet mode, turn the ignition key ON, and press the Valet push button for 3 times, and turn off the key. The LED will turn to normal operation..

Note: Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects.

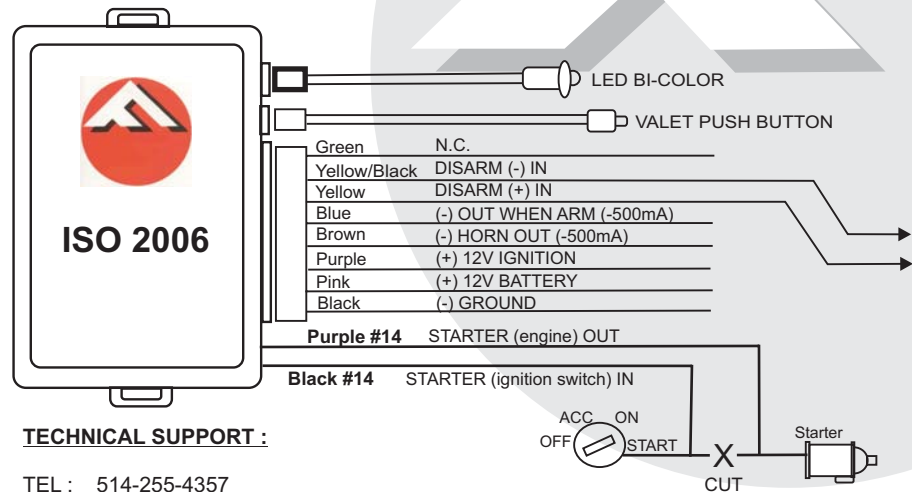

TECHNICAL SUPPORT :

TEL : 514-255-4357
FAX : 514-255-1367
WEB : www.ifar.ca

MADE IN CANADA
VERSION 2.0
JUNE 2008

LED STATUS

LED	FONCTIONS
Flash GREEN	Disarm (for 30 secondes)
Flash Red	Arm
GREEN (steady)	VALET MODE
OFF	Disarm and KEY ON (ready to start)

DISARM MODE

Disarm + Yellow wire	Disarm - Yellow/Black wire	RESULTS
GROUND	GROUND	NO STATUS
+12 Volts	GROUND	DISARM
GROUND	+12 Volts	NO STATUS
+12 Volts	+12 Volts	NO STATUS

CONNECTION WITH FACTORY REMOTE

