



Acura MDX

2007-2010




KEY-OVERRIDE-ALL


Made in Canada Rev. A - 02 / 07 / 2008
Web site: <http://www.ifar.ca>

ENCRYPTED TRANSPONDER BYPASS MODULE (Self Learning)



LED Module Diagnostics :
On: Activated.
OFF: Not activated.
Flash: Not programmed.

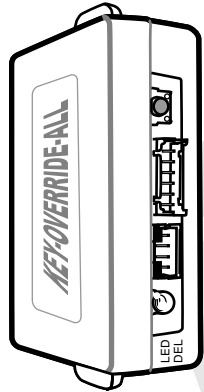


Front view of the module

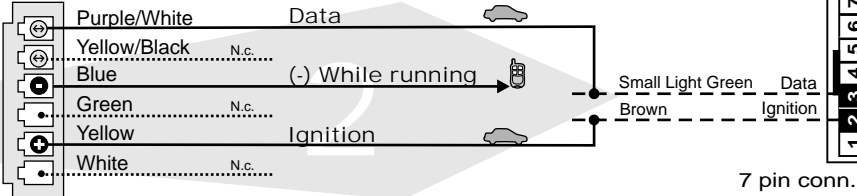

Connector 1 (Black - 4 pins):
Determine the type of installation:

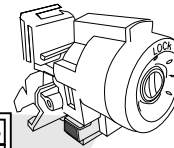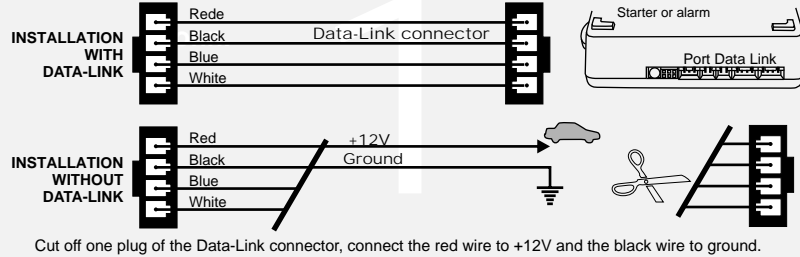


Back view of the module

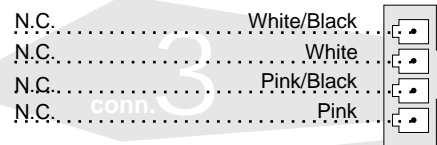

Connector 4 (White - 4 pins):

Connect with the **FLASH LINK UPDATER** for web update.

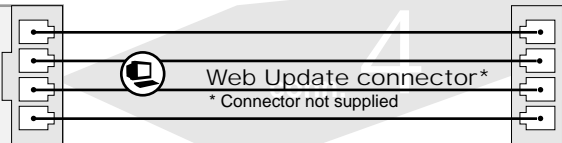

Connect wire to Remote-Starter/Alarm Connect wire to vehicle OUTPUT INPUT

1 Make the connections to the vehicle:

1.A **Connector 1 (Black):**
Determine the type of installation:
- **INSTALLATION WITH DATA-LINK**
- **INSTALLATION WITHOUT DATA-LINK**

1.B **Connector 2 (White):** Make the connections

2 Press and hold the programming button.
Insert connector 1.

3 Insert connector 2.
If the LED is flashing at this point the module is already programmed and can't be programmed again. (To prevent malicious use this module can be programmed in only one vehicle.)

4 Release the programming button when the LED turns ON.

5 Press **1 time** on the programming button.
The LED turns OFF and turns ON.

6 Press **1 more time** on the programming button and the LED will flash once.

7 Turn the Ignition to the ON position.

8 If the LED flashes 10 times, the module is programmed.
If the LED stays ON, verify your connections and repeat from step 1.

9 Turn the Ignition key to the OFF position.

10 Remove the key and start the vehicle using the remote starter to ensure functionality.



Technical support:
TEL: 514-255-HELP (4357)
FAX: 514-255-1367
Web: www.ifar.ca

Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects. This module must be install by qualified technician. This instruction guide may change without notice. Visit www.ifar.ca to get latest version.



Acura MDX

2007-2010




KEY-OVERRIDE-ALL


Fabriqu  au Canada Rev. A - 02 / 07 / 2008
Site internet <http://www.ifar.ca>

MODULE DE CONTOURNEMENT DE TRANSPONDER ENCRYPT  (Auto-apprentissage)

Diagnostic du DEL du module
Allum : Le module est activ .
 teint: Le module n'est pas activ .
Flash: Le module n'est pas programm .

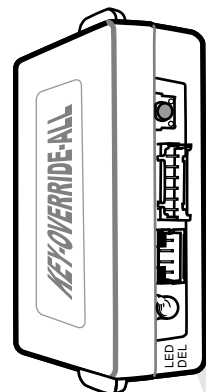


Vue de face du module

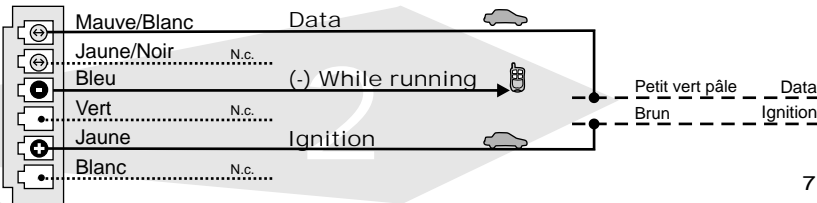

7 pin conn.

Connecteur 1 (Noir - 4 pins):
D terminez le type d'installation:

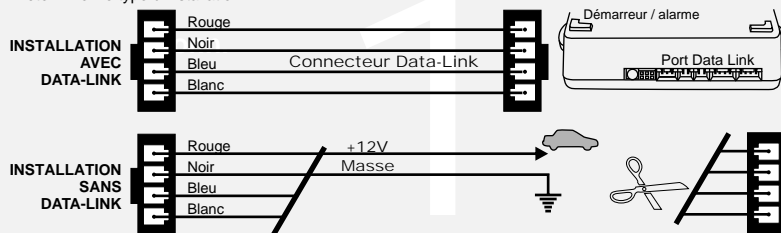


Coupez les 4 fils   l'extr mit  de l'un des deux connecteurs Data-Link.
Connectez le fil rouge au 12V et le fil noir   la masse du v hicule.



Vue de dos du module

Connecteur 4 (Blanc - 4 pins):
Connectez avec le **FLASH LINK UPDATER** pour les mises   jour par internet.

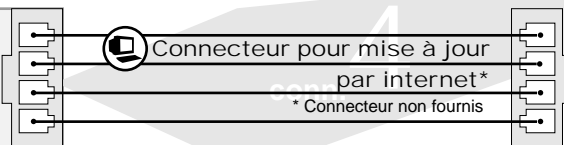

Branchement du filage au d marreur   distance/Alarme



Branchement du filage au v hicule



SORTIE



ENTR E

1 Effectuez les connexions au v hicule:

1.A **Connecteur 1 (Noir):**
D terminez le type d'installation:
- Pour l'**INSTALLATION DATA-LINK**
- Pour l'**INSTALLATION NON DATA-LINK**

1.B **Connecteur 2 (Blanc):**
Effectuez les branchements.

2 Maintenez le bouton de programmation enfonc . Ins rez le connecteur 1.

3 Ins rez le connecteur 2.
Si la DEL clignote alors le module a d j   t  programm  sur un v hicule et ne peut  tre programm    nouveau. (Dans le but de pr venir toute utilisation malicieuse, ce module peut  tre programm  dans seulement (1) un v hicule.)

5 Lorsque la DEL s'allume, rel chez le bouton de programmation.

6 Appuyez **1 fois** sur le bouton de programmation. La DEL s' teint et se rallume.

7 Appuyez **1 autre fois** sur le bouton de programmation et la DEL clignotera un coup.

8 Tournez la clef en position ignition (ON).

9 La DEL clignote 10 fois le MODULE est programm .
Si la DEL reste allum e, v rifiez vos connexions et recommencez la programmation   partir de l' tape 1.

10 Tournez la clef   OFF.

11 Retirez la cl  du barillet et d marrez le v hicule avec le d marreur   distance.



Support Technique:
TEL: 514-255-HELP (4357)
FAX: 514-255-1367
Site internet: www.ifar.ca

Ni le manufacturier, ni le distributeur ne se consid rent responsables des dommages caus s ou ayant pu  tre caus s, indirectement ou directement, par ce module, except  le remplacement de ce module en cas de d fectuosit  de fabrication. Ce module doit  tre install  par un technicien qualifi . Ce guide d'instruction peut faire l'objet de changement sans pr avis. Consultez le www.ifar.ca pour voir la plus r cente version.