

GM DATA ALL

All GM data controlled vehicles. Control of doorlock functions, OEM Security, Passlock and PK3 (plus functions as listed below). Interface module self-adjusts to various vehicle platforms (see application chart).

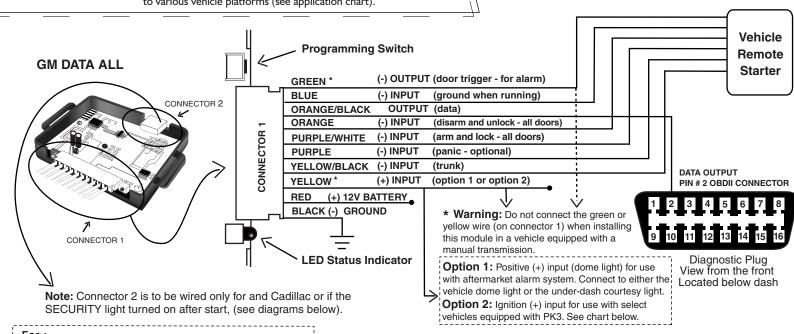

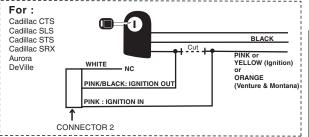

PROGRAMMING SEQUENCE:

- I Locate and press the programming switch while inserting the wire harness into connector 1 of the GM DATA ALL module. The LED status indicator will illuminate to indicate you are in programming mode. Keep the programming button pressed while turning the ignition to the "ON" position. Release the programming switch once the LED status indicator flashes rapidly.
- 2 Start the engine (utiling the vehicle key). The LED status indicator will turn off to indicate the module has been programmed for either PK3 or Passlock (and control of additional features where applicable). Turn the key to the "OFF" position. The module is now ready for use.

Note: The manufacturer/distributor is not responsible for any damages which may directly or indirectly result from the installation of this module. The manufacturer/distributor is limited to the repair or replacement of this module in the case of manufacturing defects.

Order Part Number: GMDAA

Version: 3.0

Revision: Sept. 29 2004

Made in Canada

Manufactured under US patent No.: 5,719,551 6,011,460 B1 6,243,004 B1 6,249,216 B1 6,275,147 B1 6,529,124 B2 6,756,885 B1 6,756,886 B2 6,771,167 B1 Canadian patent No.: 2,320,248 2,415,023 European patent No.: 1,053,128

Orange (Venture &	Monta	na)							F	onction	S	
Vehicle			,	'eaı	rs			PK3 or Passlock Bypass	Doorlock Control	Trunk Release Control	OEM Security Control	Heated Seat Contro
	9	98 99	_	_	02	03	04			Control		
Bravada		>		X	•	•	•	Χ•	•		•	?
Envoy		\			•	•	•	Χ•	•		•	
Trailblazer		>	$\langle \rangle$	X	•	•	•	Χ•	•		•	?
Rainier							•	•	•		•	?
Avalanche		>		X	X	•	•	X∙	•		•	•
Escalade		\	(X	X	X	•	•	Χ•	•		•	•
C/K Pick Up		>			X	•	•	X●	•		•	•
Silverado		>			X	•	•	Χ•	•		•	•
Sierra		>		X	X	•	•	X∙	•		•	•
Suburban		\	$\langle \rangle$	X	X	•	•	X∙	•		•	•
Tahoe	L	->	() ()	X	X	•	•	Χ•	•		•	•
Yukon (all)				X	X	•	•	Χ•	•		•	•
Hummer		>	$\langle \rangle$	$\langle X \rangle$	X	•	•	X●	•		•	•
	9	99	9 00	01	02	03	04					
Aurora			?	•	•	•	•	•	•	•	•	一个
SRX							•	•	•	•	•	
CTS	_					•	•	•	•	•	•	
Deville			?	•	•	•	•	•	•	•	•	
Le Sabre	L		•	•	•	•	•	•	•	•	•	
Bonneville			•	•	•	•	•	•	•	•	•	
Park Avenue	L		?	•	•	•	?	•	?	?	?	
SLS	L		?	•	•	•		•	•	•	•	
STS			?	•	•	•	•	•	•	•	•	
	9	8 99	9 00	01	02	03	04					! .
Alero	··; L		•	•	•	•	•	•				Heated Seat wil
Astro	i L	• •	•	•	•	•	•	•				turn ON
Blazer	Ŀ	• •	•	•	•	•	•	•				low power only if
Cavalier	il		•	•	•	•	•	•				the engir
Express Van	i L	• •	•	•	•	•	•	•				temp is below 0°
Grand Am	i L	•	•	•	•	•	•	•				when it
Impala	<u>×</u> _		•	•	•	•	•	•				started
Intrigue	0	• •	•	•	•	•		•				
Monte Carlo	Pass		•	•	•	•	•	•				
S-10	~ □	• •	•	•	•	•		•				
Safari	:	• •	_	•	•	•	•	•				
Saturn Série S	i L	\perp	•	•	•	•		•				
Savana	i L	• •	•	•	•	•	•	•				
Sonoma		• •	-	•	•	•		•				
Sunfire	:	\perp	•	•	•	•	•	•				
Astek	··;				•	•	•	•				
	Grand Prix NON COMPATIBLE Option 2: Connect the yellow wire								:			
Montana	PK3		•	•	•	•	•	• (connector	I) to ignit	tion.	
Rendez-vous	<u>م</u>				•	•	•	• † ī	his is a ma	ndatory o	connection for v	ehicles/
Silhouette	:						•	• :	this categ	on,		

- X-- TESTED and functional unique fonction.
- -- TESTED and functional.
- ? -- Not TESTED on all series of each models, but should be functional.