


	Vehicles Véhicules	Years / Années										Key Sense color
TOYOTA		98	99	00	01	02	03	04	05	06		
	4Runner	•	•	•	•	•					Yellow/Red	
	Avalon	•	•								Red/Yellow	
	Avalon			•	•	•	•	•			Red/White	
	Camry	•	•	•							Blue/Black	
	Camry				•						Blue/Black	
	Camry					•	X	X			Blue	
	Highlander					•	•	•			Blue	
	Land Cruiser	•	•	•	•	•					Red/Black	
	MR2 Spider					•	•	•			Blue/Red	
	RAV4					•	•	•			Blue/Red	
LEXUS	Sequoia					•	•				Yellow/Green	
	Sienna		•	•	•	•	•				Blue/Black	
	Solara		•	•	•	•	•				Blue/Black	
		98	99	00	01	02	03	04	05	06		
	ES 300	•	•	•	•						Blue/Black	
	ES300					•	•				Blue	
	GS 300	•	•	•	•	•	•	•	•		Yellow	
	GS 400	•	•	•							Yellow	
	GS 430				•	•	•	•	•		Yellow	
	IS 300				•						Black/Yellow	
	IS 300					•	•	•	•		Black/Yellow	
LS 400	•	•	•							Yellow		
LX 470	•	•	•	•	•					Red/White		
RX 300		•								Blue		
RX 300			•							Blue		
RX 300				•	•	•				Blue		
SC300	•	•	•							Yellow		
SC400	•	•	•							Yellow		

• = COMPATIBLE

X = COMPATIBLE SUR 4 Cylindre SEULEMENT

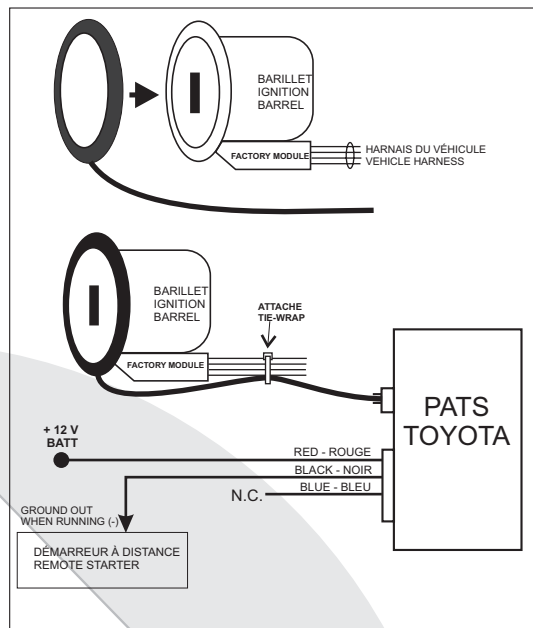

### INSTALLATION

- Install the remote starter and test by placing the original key in the barrel.
- Remove the covers surrounding the ignition barrel.
- Install the loop antenna around lighting ring in the barrel.
- Secure the wire with tie-wrap.
- Connect the RED wire to 12V constant and the BLACK wire to "out when running". **Keep the BLACK wire bare** for programming procedure.
- Program the Pats Toyota.

### PROGRAMMATION

Before starting the programming procedure, be sure to get 1 functional key of the vehicle, bare the KEY SENSE wire (see wire color list) from the barrel. Each step must be completed in the indicated delay, otherwise the Pats Toyota will not be programmed therefore it would be necessary to restart the procedure.

- Insert the key into the ignition barrel. (Do not turn)
- Within 15 seconds, **depress and release the acceleration pedal 4 times.**
- Within 20 seconds, **depress and release the brake pedal 5 times.**
- Remove the key from ignition barrel.
- Within 10 seconds,
  - Connect the **BLACK** wire from the Pats Toyota to GROUND
  - Connect the **KEY SENSE** wire from the barrel to GROUND
 depress and release the acceleration pedal 1 times.
- After 60 seconds (vehicle programming delay), **disconnect the ground** from the **KEY SENSE** wire from barrel and **connect the BLACK** wire from the Pats Toyota to the out when running of remote starter. Note: The **KEY SENSE** and the **BLACK** wires **must be not** connecting together to ground after the programming.

No. Pièce : PATS TOYOTA

Version : 3.0.a

Revision : 31 Jan. 2006

Technical Support :

TEL: 514-255-2720 FAX: 514-255-1367

Web: [www.ifar.ca](http://www.ifar.ca)

Fait au Canada

Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects. This module must be install by qualifier technician.