

# PATS CHRYSLER

## TRANSPONDER BYPASS MODULE FOR CHRYSLER & DODGE

**VEHICLE :**  
 Chrysler / Dodge equippe with  
 Transponder Immobilizer  
 SENTRY ®


See Web site  
<http://support.fortinradio.com>  
 Pats Chrysler application

### Programming :

- Once the connections are done.
- Two (2) functional vehicle keys** are required prior to beginning the programming procedure:
- 1- Insert the **first valid key** into the ignition switch and turn the it to **ON position for 5 seconds**.
  - 2- Turn the key to the **OFF position** and remove the first key.
  - 3- Insert the **second valid key** and turn the ignition switch to **ON position for 15 seconds**.  
 After **10 seconds**, a **chime** will sound and the **SECURITY** light will begin to flash. Turn the ignition key to **OFF position** and remove the second key.


YOU NOW HAVE 60 SECONDS TO COMPLETE THE FOLLOWING

- 4- Place the Pats Chrysler near the front of the ignition barrel for the next 2 steps.
- 5- With a jumper wire, **power up vehicles ignition**.
- 6- After **10 seconds**, the **chime** will sound.  
 When the **SECURITY** light stops flashing, then turn ON for 3 seconds, then turn OFF.  
 The PATS module is now programmed.

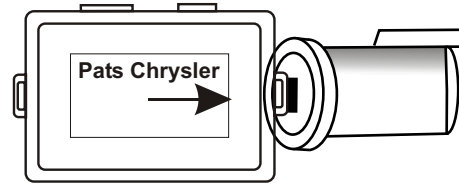

Place close and toward ignition barrel for program

### Installation :

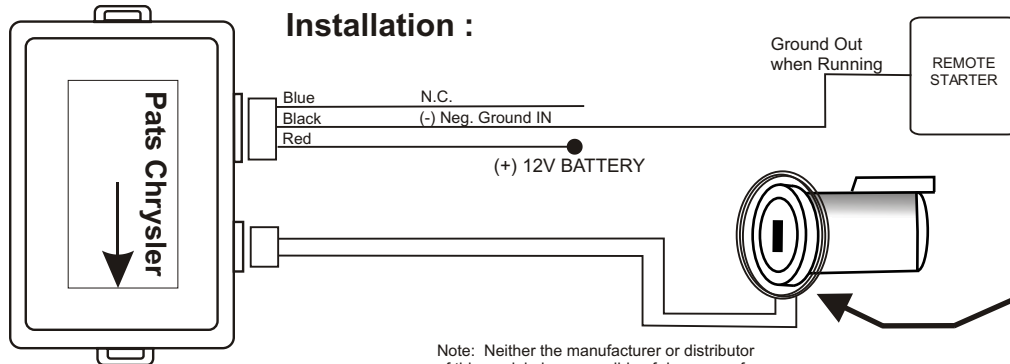

Note: Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects.

VERSION : 3.0  
 Revision : Jan. 15 2005

MADE IN CANADA

### TECHNICAL SUPPORT:

TEL : 514-255-0446  
 FAX : 514-255-1367  
 Web: <http://support.fortinautoradio.com>

3 to 5 turns of loop around the ignition key are required.

**IMPORTANT :** Once the Pats Chrysler is programmed, it **cannot** be programmed or use for and other Chrysler or Dodge vehicle

# PATS CHRYSLER

## TRANSPONDER BYPASS MODULE FOR CHRYSLER & DODGE

**VEHICLE :**  
 Chrysler / Dodge equippe with  
 Transponder Immobilizer  
 SENTRY ®


See Web site  
<http://support.fortinradio.com>  
 Pats Chrysler application

### Programming :

- Once the connections are done.
- Two (2) functional vehicle keys** are required prior to beginning the programming procedure:
- 1- Insert the **first valid key** into the ignition switch and turn the it to **ON position for 5 seconds**.
  - 2- Turn the key to the **OFF position** and remove the first key.
  - 3- Insert the **second valid key** and turn the ignition switch to **ON position for 15 seconds**.  
 After **10 seconds**, a **chime** will sound and the **SECURITY** light will begin to flash. Turn the ignition key to **OFF position** and remove the second key.


YOU NOW HAVE 60 SECONDS TO COMPLETE THE FOLLOWING

- 4- Place the Pats Chrysler near the front of the ignition barrel for the next 2 steps.
- 5- With a jumper wire, **power up vehicles ignition**.
- 6- After **10 seconds**, the **chime** will sound.  
 When the **SECURITY** light stops flashing, then turn ON for 3 seconds, then turn OFF.  
 The PATS module is now programmed.

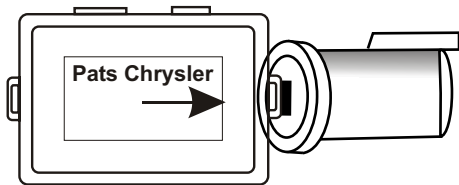

Place close and toward ignition barrel for program

### Installation :

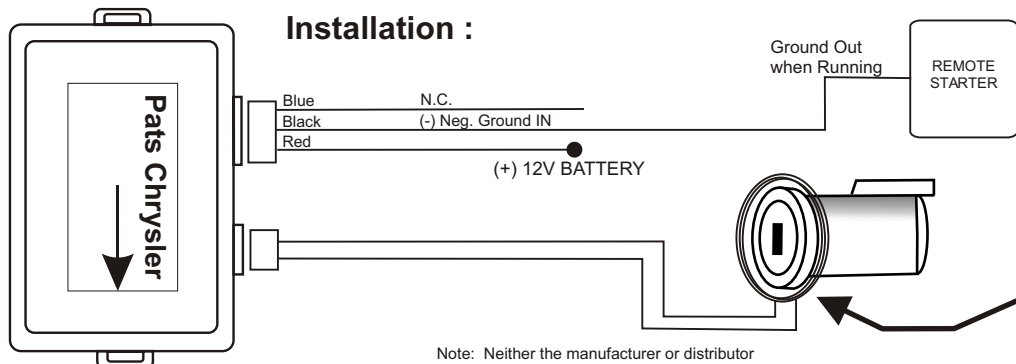

Note: Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects.

VERSION : 3.0  
 Revision : Jan. 15 2005

MADE IN CANADA

### TECHNICAL SUPPORT:

TEL : 514-255-0446  
 FAX : 514-255-1367  
 Web: <http://support.fortinautoradio.com>

3 to 5 turns of loop around the ignition key are required.

**IMPORTANT :** Once the Pats Chrysler is programmed, it **cannot** be programmed or use for and other Chrysler or Dodge vehicle