# PATS CHRYSLER 04

### TRANSPONDER BYPASS MODULE FOR CHRYSLER & DODGE

#### Programming:

Once the connections are done.


Two (2) functional vehicle keys are required prior to beginning the programming procedure:


- 1- Insert the first valid key into the ignition switch and turn the it to ON position for 5 seconds.
- 2- Turn the key to the **OFF position** and remove the first key.
- 3- Insert the second valid key and turn the ignition switch to ON position for 15 seconds.
- After 10 seconds, a chime will sound and the SECURITY light will begin to flash. Turn the ignition key to OFF position and remove the second key.

YOU NOW HAVE 60 SECONDS TO COMPLETE THE FOLLOWING

- 4- Place the Pats Chrysler 04 near the front of the ignition barrel for the next 2 steps.
- 5- With a jumper wire, power up vehicles ignition.
  6- After 10 seconds, the chime will sound.

When the **SECURITY** light stops flashing, then turn ON for 3 seconds, then turn OFF. The PATS module is now programmed.



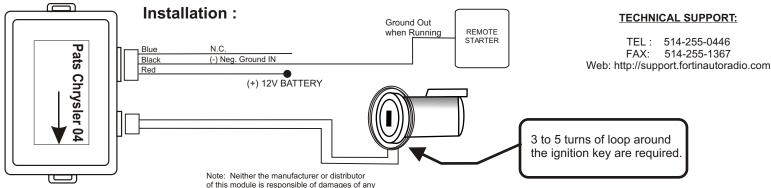

**VERSION: 3.0** 

MADE IN CANADA

Revision: Jan 15 2005

of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects

IMPORTANT: Once the Pats Chrysler04 is programmed, it cannot be programmed or use for and other Chrysler or Dodge vehicle

SENTRY

**PACIFICA** 

CARAVAN

300 & 300C

MAGNUM

**VEHICLE:** 

2003-2005

2004-2005

2005

2005

2005

Chrysler / Dodge equipe with Transponder Immobilizer

GRAND CARAVAN 2004-2005

TOWN&COUNTRY 2004-2005

VEHICLE :

Chrysler / Dodge equipe with Transponder Immobilizer

TOWN&COUNTRY 2004-2005

2003-2005

2004-2005

2004-2005

2005

2005

2005

SENTRY

**PACIFICA** CARAVAN

300 & 300C

MAGNUM

GRAND CARAVAN

JEEP Grand Cherokee

# PATS CHRYSLER 04

### TRANSPONDER BYPASS MODULE FOR CHRYSLER & DODGE

#### Programming:


Once the connections are done.


Two (2) functional vehicle keys are required prior to beginning the programming procedure:

- 1- Insert the first valid key into the ignition switch and turn the it to ON position for 5 seconds.
- 2- Turn the key to the **OFF position** and remove the first key.
  3- Insert the **second valid key** and turn the ignition switch to **ON position for 15 seconds**.
- After 10 seconds, a chime will sound and the SECURITY light will begin to flash. Turn the ignition key to **OFF** position and remove the second key.

YOU NOW HAVE 60 SECONDS TO COMPLETE THE FOLLOWING

- 4- Place the Pats Chrysler 04 near the front of the ignition barrel for the next 2 steps.
- 5- With a jumper wire, power up vehicles ignition.
- 6- After 10 seconds, the chime will sound.
- When the SECURITY light stops flashing, then turn ON for 3 seconds, then turn OFF. The PATS module is now programmed.

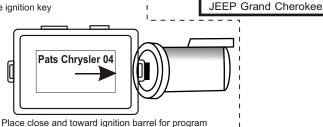

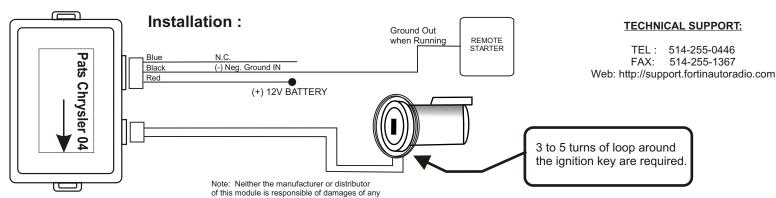

**VERSION: 3.0** Revision: Jan 15 2005

of this module is responsible of damages of any kind indirectly or directly caused by this module, MADE IN CANADA except for the replacement of this module in case of manufacturing defects

IMPORTANT: Once the Pats Chrysler04 is programmed, it cannot be programmed or use for and other Chrysler or Dodge vehicle