

PATS CHRYSLER 04

TRANSPONDER BYPASS MODULE FOR CHRYSLER & DODGE


VEHICLE :	
Chrysler / Dodge equipé with Transponder Immobilizer SENTRY ®	
PACIFICA	2003-2005
CARAVAN	2004-2005
GRAND CARAVAN	2004-2005
TOWN&COUNTRY	2004-2005
300 & 300C	2005
MAGNUM	2005
JEEP Grand Cherokee	2005
JEEP LIBERTY	2005
DAKOTA	2005
CHARGER	2006

Programming :

- Once the connections are done.
- Two (2)** functional vehicle keys are required prior to beginning the programming procedure:
- 1- Insert the **first valid key** into the ignition switch and turn the it to **ON position for 5 seconds**.
 - 2- Turn the key to the **OFF position** and remove the first key.
 - 3- Insert the **second valid key** and turn the ignition switch to **ON position for 15 seconds**.
After **10 seconds**, a **chime** will sound and the **SECURITY** light will begin to flash. Turn the ignition key to **OFF position** and remove the second key.


YOU NOW HAVE 60 SECONDS TO COMPLETE THE FOLLOWING

- 4- Place the Pats Chrysler 04 near the front of the ignition barrel for the next 2 steps.
- 5- With a jumper wire, **power up vehicles ignition**.
- 6- After **10 seconds**, the **chime** will sound.
When the **SECURITY** light stops flashing, then turn ON for 3 seconds, then turn OFF.
The PATS module is now programmed.

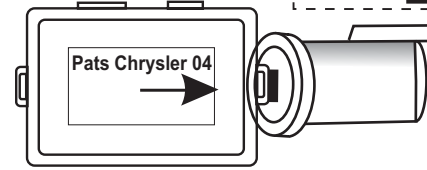

Place close and toward ignition barrel for program

Installation :

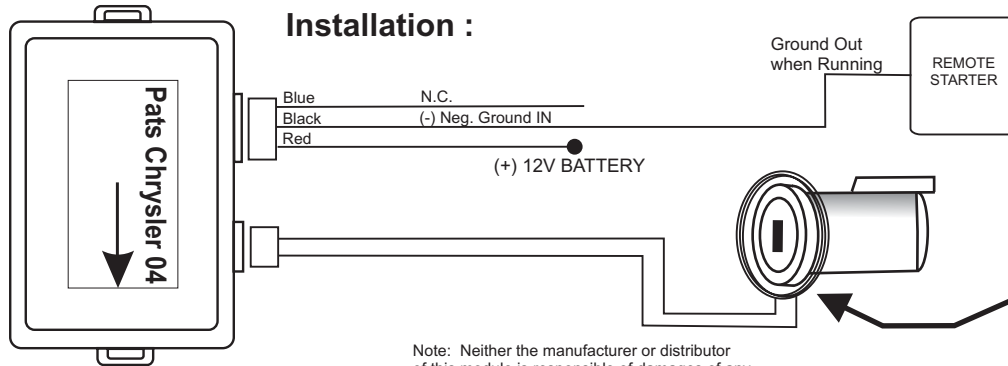

Note: Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects.

VERSION : 3.0.B MADE IN CANADA
Revision : August 22 2005

3 to 5 turns of loop around the ignition key are required.

IMPORTANT : Once the Pats Chrysler04 is programmed, it **cannot** be programmed or use for and other Chrysler or Dodge vehicle

TECHNICAL SUPPORT:

TEL : 514-255-0446
FAX : 514-255-1367
Web: <http://support.fortinautoradio.com>
Programming sequence video available on website

PATS CHRYSLER 04

TRANSPONDER BYPASS MODULE FOR CHRYSLER & DODGE


VEHICLE :	
Chrysler / Dodge equipé with Transponder Immobilizer SENTRY ®	
PACIFICA	2003-2005
CARAVAN	2004-2005
GRAND CARAVAN	2004-2005
TOWN&COUNTRY	2004-2005
300 & 300C	2005
MAGNUM	2005
JEEP Grand Cherokee	2005
JEEP LIBERTY	2005
DAKOTA	2005
CHARGER	2006

Programming :

- Once the connections are done.
- Two (2)** functional vehicle keys are required prior to beginning the programming procedure:
- 1- Insert the **first valid key** into the ignition switch and turn the it to **ON position for 5 seconds**.
 - 2- Turn the key to the **OFF position** and remove the first key.
 - 3- Insert the **second valid key** and turn the ignition switch to **ON position for 15 seconds**.
After **10 seconds**, a **chime** will sound and the **SECURITY** light will begin to flash. Turn the ignition key to **OFF position** and remove the second key.


YOU NOW HAVE 60 SECONDS TO COMPLETE THE FOLLOWING

- 4- Place the Pats Chrysler 04 near the front of the ignition barrel for the next 2 steps.
- 5- With a jumper wire, **power up vehicles ignition**.
- 6- After **10 seconds**, the **chime** will sound.
When the **SECURITY** light stops flashing, then turn ON for 3 seconds, then turn OFF.
The PATS module is now programmed.

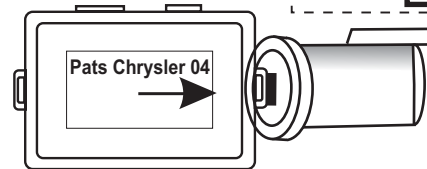

Place close and toward ignition barrel for program

Installation :

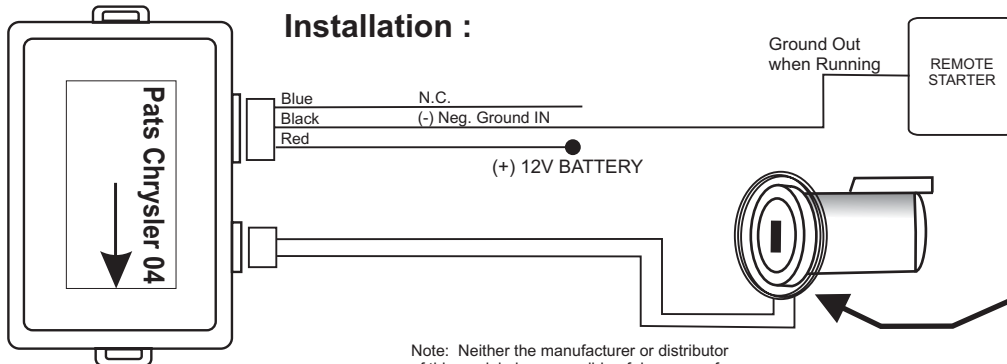

Note: Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects.

VERSION : 3.0.B MADE IN CANADA
Revision : August 22 2005

3 to 5 turns of loop around the ignition key are required.

IMPORTANT : Once the Pats Chrysler04 is programmed, it **cannot** be programmed or use for and other Chrysler or Dodge vehicle

TECHNICAL SUPPORT:

TEL : 514-255-0446
FAX : 514-255-1367
Web: <http://support.fortinautoradio.com>
Programming sequence video available on website