

PATS 5 DURANGO

Copyright © 2006, FORTIN AUTO RADIO INC. ALL RIGHTS RESERVED

INSTALLATION GUIDE

Made in Canada - V3.0.c - November 1, 2006
Web site: <http://www.ifar.ca>

TRANSPONDEUR BYPASS MODULE FOR DODGE DURANGO




DODGE DURANGO 2004*-2005-2006-2007

*Built after June 2004

Chrysler / Dodge equipped with Transponder Immobilizer SENTRY ®

WIRING / CONNECTION GUIDE

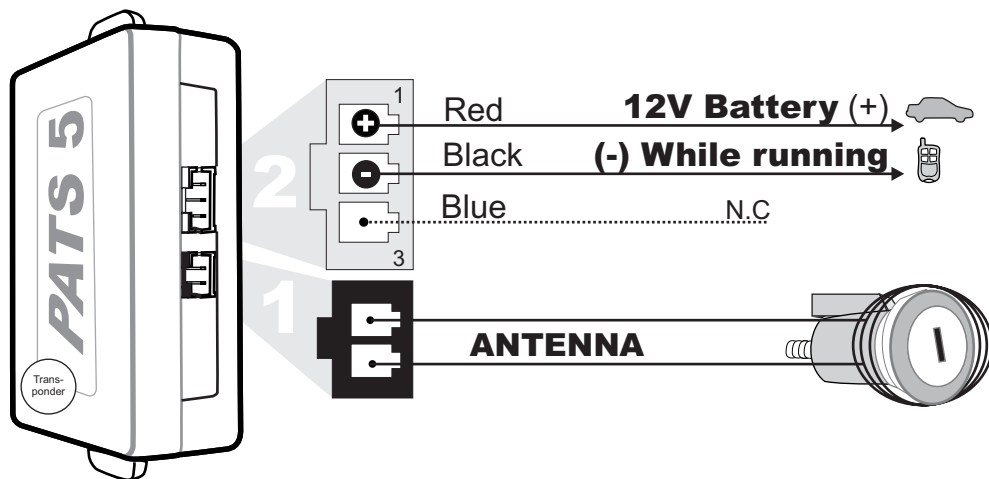

Two (2) functional keys required.
Keep the keys separate while programming.



Each step must be completed in the indicated delay, otherwise the PATS Kit will not be programmed therefore it would be necessary to restart the procedure.

IMPORTANT : You can program the transpondeur only one time.


WARNING : Do not attempt to start the vehicle with an unprogrammed PATS more than 4 times or the vehicle may lock itself for several hours. After each failed start, start the vehicle once with a valid key.

IMPORTANT : Once the PATS 5 Durango is programmed, it can't be programmed or used on any other vehicle.

START HERE

INSTALLATION AND PROGRAMMING INSTRUCTIONS

1

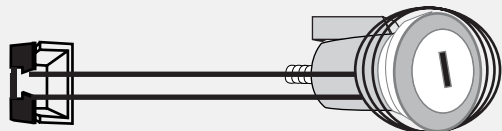

Connector 1 (Black):
Make 3 to 4 loops around the ignition barrel.
(Secure the wire with tie-wrap.)

2




Connector 2 (White):
Connect the red wire to 12V constant
Connect the black wire to "Ground out when running".

3



Insert the first key into the ignition switch and turn the **Ignition ON** for **5 seconds**.

4



Turn the key **OFF** and remove the first key.

5



Insert the second key and turn the **ignition ON**.


6



After 10 seconds, a chime will sound and the **SECURITY** light will begin to flash.
Turn the **ignition OFF** and remove the second key.


You have 60 seconds to complete the following procedure

7

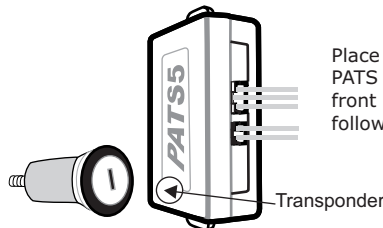

Place the Transponder (show on the PATS label) close and toward the front of the ignition barrel for the following steps.

8

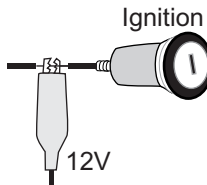

With jumper wires, power up all the ignition wires.

9

SECURITY

After 10 seconds, a chime will sound. The **SECURITY** light will stop flashing, **turn the ignition ON for 3 seconds**, then turn OFF.

The PATS 5 DURANGO is now programmed.

TECHNICAL SUPPORT / INFORMATION

Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects. This module must be install by qualified technician. This instruction guide may change without notice. Visit www.ifar.ca to get latest version.

Technical support:

TEL: 514-255-2720

FAX: 514-255-1367

Web: www.ifar.ca

FORTIN
ELECTRONIC SYSTEMS

PATS 5 DURANGO

Copyright © 2006, FORTIN AUTO RADIO INC. TOUS DROITS RÉSERVÉS

GUIDE D'INSTALLATION

Fabrique au Canada - V3.0.c - 1 novembre 2006
Site Internet: <http://www.ifar.ca>

MODULE DE CONTOURNEMENT DE TRANSPONDEUR POUR DODGE DURANGO




DODGE DURANGO 2004*-2005-2006-2007

*Fabriqué après juin 2004

Chrysler / Dodge équipé d'un Transponder Immobilizer SENTRY ®

CÂBLAGE / GUIDE DE CONNEXION

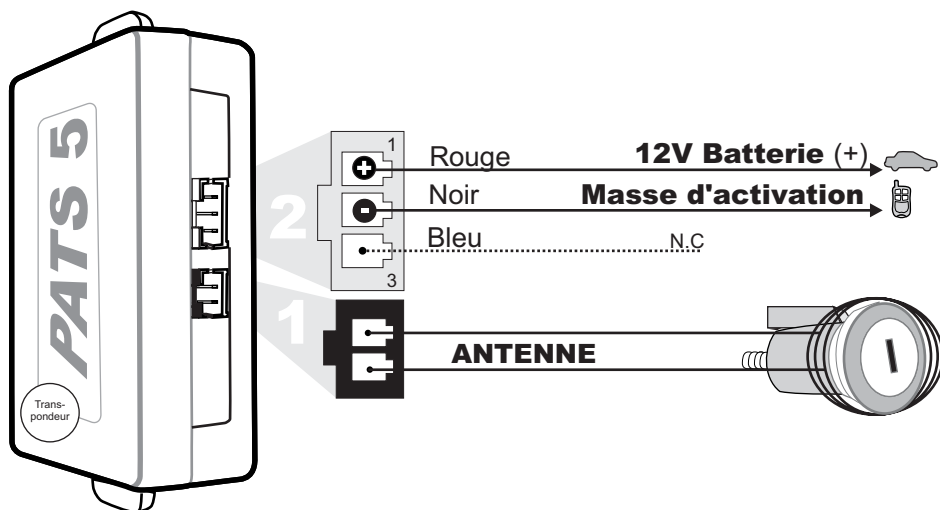

Deux (2) clés fonctionnelles sont nécessaires.
Gardez les clés séparées l'une de l'autre pendant la procédure de programmation.



Chaque étape doit être complétée dans le délai indiqué, sans quoi le PATS Kit ne sera pas programmé et il sera nécessaire de recommencer.

IMPORTANT : Vous pouvez programmer le PATS 5 QU'UNE SEULE FOIS.


ATTENTION : Ne pas tenter de démarrer le véhicule plus de 4 fois consécutif avec un PATS non programmé. Sans quoi le véhicule ne sera plus en mesure de démarrer pour plusieurs heures. Après chaque tentative de démarrage avec un PATS non programmé redémarrez le véhicule avec une clé valide pour remettre à zéro.

IMPORTANT : Une fois le PATS programmé, il ne peut être programmé ou utilisé sur un autre véhicule.

Commencez ici


INSTALLATION ET INSTRUCTIONS DE PROGRAMMATION

1

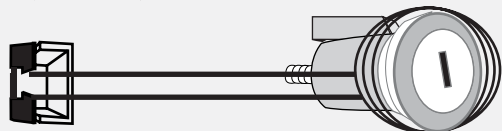

Connecteur 1 (Noir):
Enroulez les fils du connecteur noir autour de barillet d'ignition 3 à 4 tours pour un fonctionnement optimal.

2



Connecteur 2 (Blanc):
• Branchez le fil rouge à la batterie.
• Branchez le fil noir à "out when running (-)" du démarreur à distance.

3




Introduisez l'une des deux clés dans le contact et placez-la à la **position ON pendant 5 secondes.**

4



Coupez le contact et retirez la clé.

5



Introduisez l'autre clé fonctionnelle dans le contact et placez-la à **ON.**

6




Dès que le témoin **SECURITY** commence à **clignoter** et qu'une **tonalité** se fait entendre (environ 10 secondes après avoir mis la clé à ON), **coupez le contact** et retirez la clé.




VOUS AVEZ 60 SECONDES POUR EFFECTUER LES ÉTAPES SUIVANTES.

7

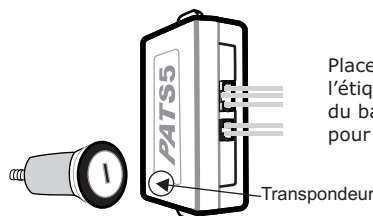

Placez le transponder (indiqué sur l'étiquette du Pats) contre le devant du barillet de l'ignition du véhicule pour les 2 prochaines étapes.

8

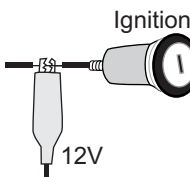

À l'aide d'un fil, vous devez alimenter les ignitions manuellement.

Le témoin **SECURITY clignotera** jusqu'à ce que la tonalité se fasse entendre.
Le témoin devrait allumer, pendant environ 3 secondes, puis s'éteindre.

9 SECURITY

Le PATS 5 DURANGO est programmé.

INFORMATIONS / SUPPORT TECHNIQUE

Ni le fabricant, ni le distributeur ne se considèrent responsables des dommages causés ou ayant pu être causés, indirectement ou directement, par ce module, excepté le remplacement de ce module en cas de défectuosité de fabrication. Ce module doit être installé par un technicien qualifié. Ce guide d'instruction peut faire l'objet de changement sans préavis. Consultez le www.ifar.ca pour voir la plus récente version.

Support Technique:

TEL: 514-255-2720

FAX: 514-255-1367

Web: www.ifar.ca

FORTIN
ELECTRONIC SYSTEMS