


Text2Car and EVO-ALL


1. Plug in the Flash-Link-2 updater into the computer's USB port with the provided USB cable.




2. Run Flash Link Manager Software.

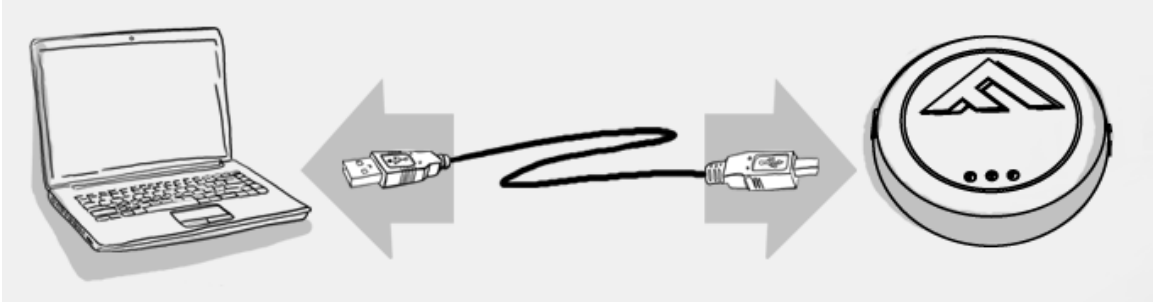


3. Plug in the Module you want to Flash update with the provided DATALINK cable.

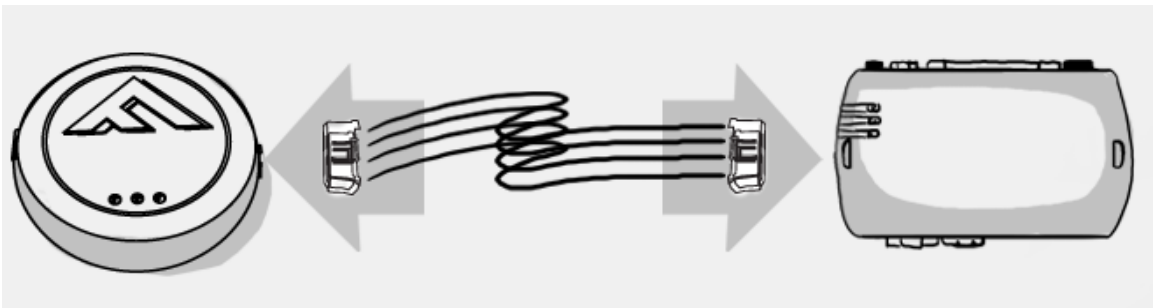


4. Click on UNIT OPTIONS tab.

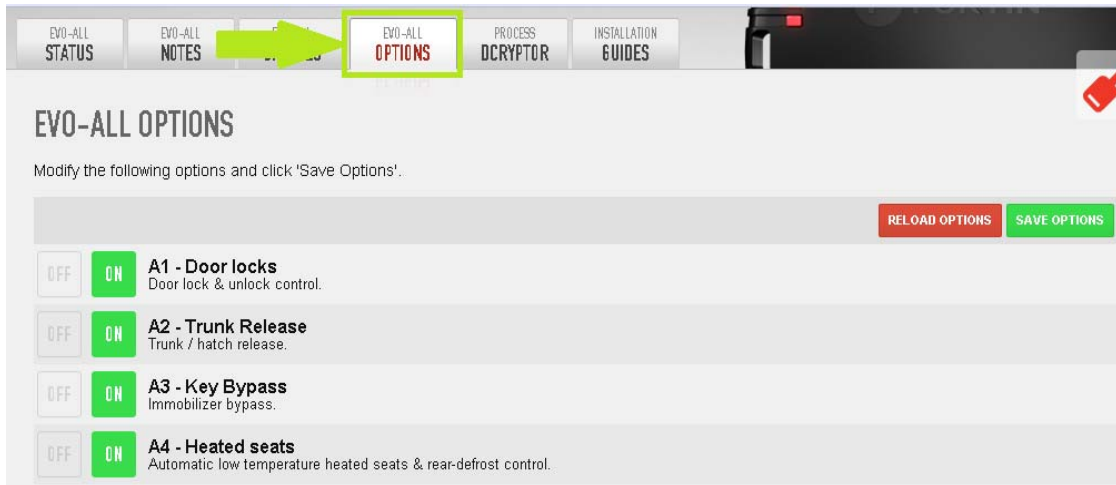


5. Activate Supported RF Kits and option H1 – Fortin.

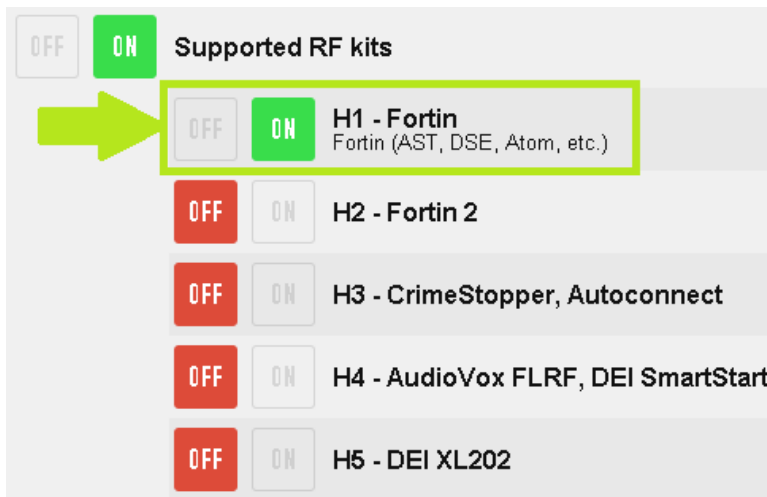


6. Click SAVE OPTIONS.

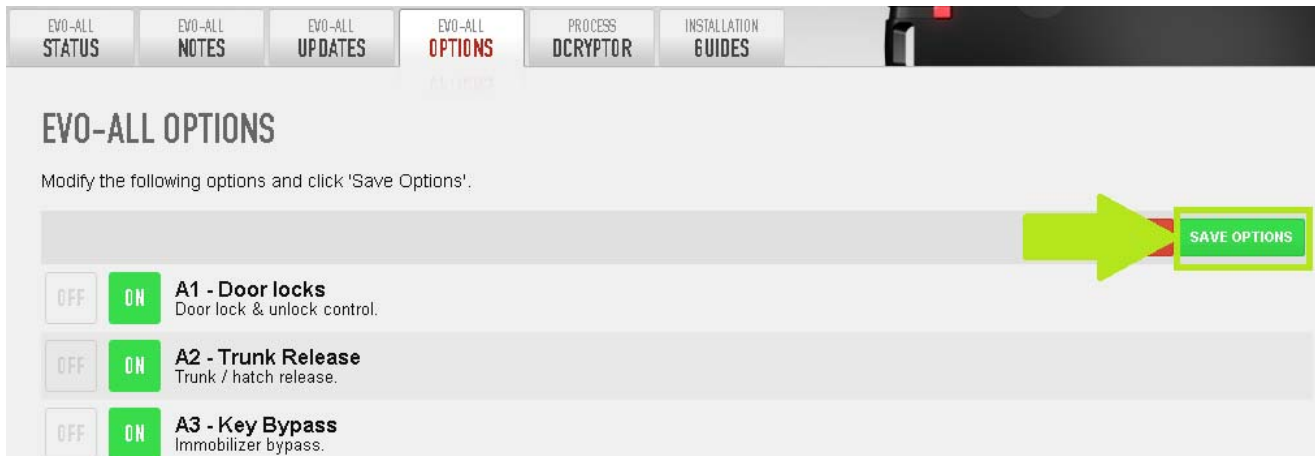

7. Wait for the Options Saved message to appear in the top right corner.

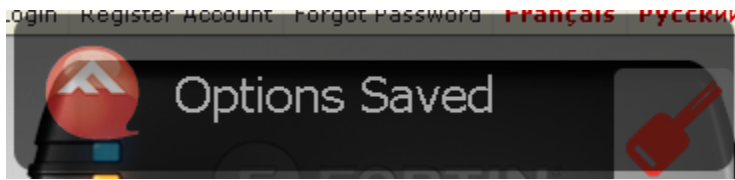


8. Cut the data connector from the Text2Car unit and connect it to the supplied Fortin DATALINK cable as shown.

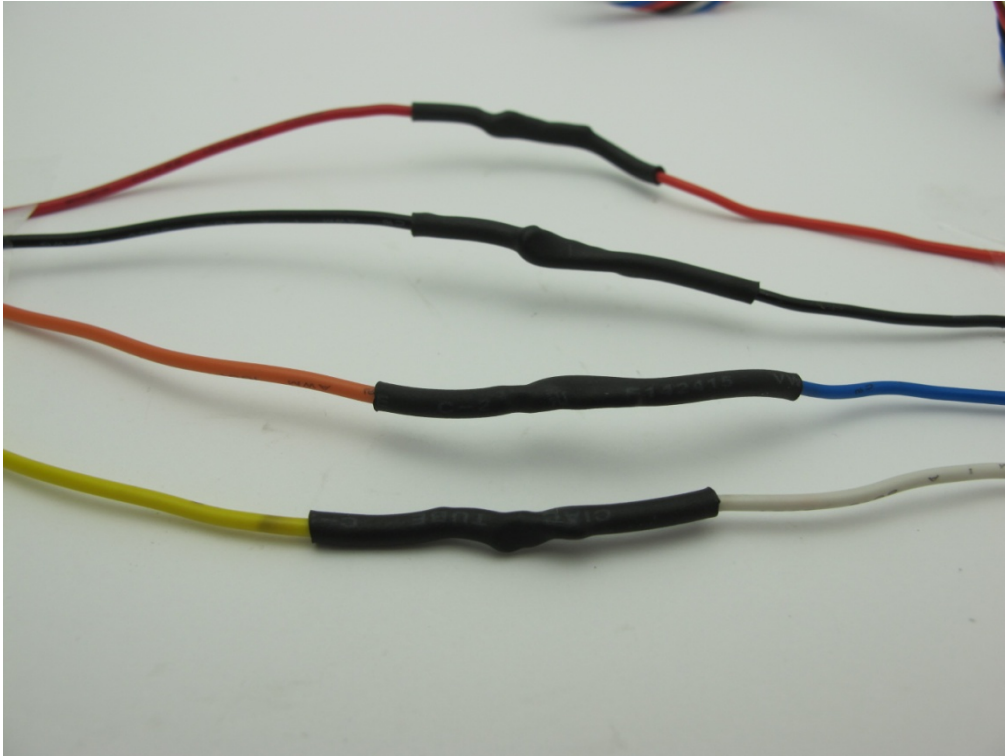


Text2car -->Orange | Blue<-- EVO-ALL
Text2car -->Yellow | White<-- EVO-ALL
Text2car -->Black | Black<-- EVO-ALL
Text2car -->Red | Red<-- EVO-ALL

9. To program remotes on the units, Press and hold the FORTIN programming button. Insert the 4-Pin (Data-Link) connector. Release the programming button when the LEDs are BLUE AND RED.

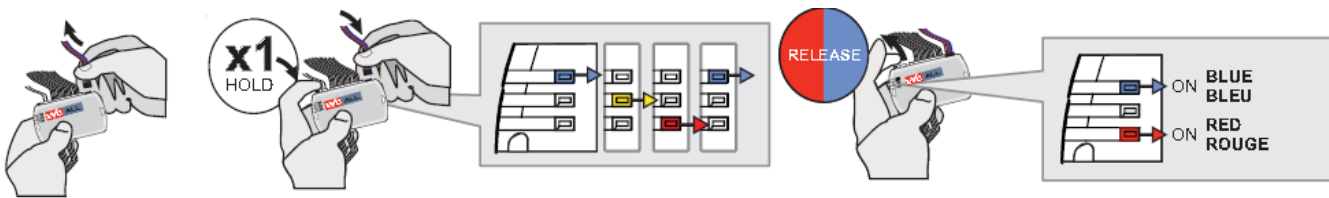

10. Press and hold the FORTIN programming button again for 5 seconds (Blue and Red will go Off and back On after 5 seconds). Turn ignition On, the Yellow LED will turn On.

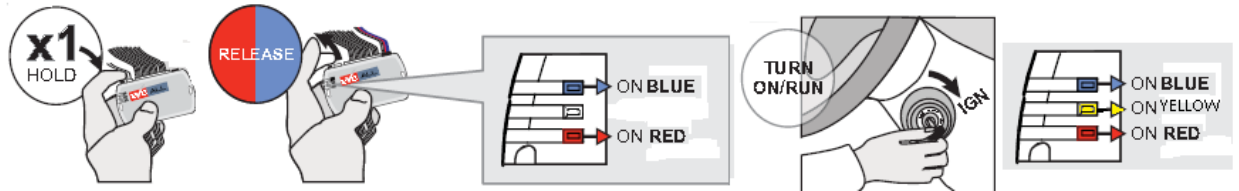

11. Send the LOCK command with the online interface. The BLUE and RED LED's will flash once to confirm.

12. Turn the vehicle Ignition Off and test the installation.

13. Test your installation.