PATS CHRYSLER 08+

Copyright © 2007, FORTIN AUTO RADIO INC ALL RIGHTS RESERVED

INSTALLATION GUIDE
Made in Canada - Rev.A - 11 / 12 / 2007
Web site: http://www.ifar.ca

TRANSPONDER BYPASS MODULE WITH KEY MUX AND FACTORY ALARM DISARM FOR CHRYSLER & DODGE

FORTIN ELECTRONIC SYSTEMS

CHRYSLER

DODGE

START HERE — WIRING / CONNECTION GUIDE

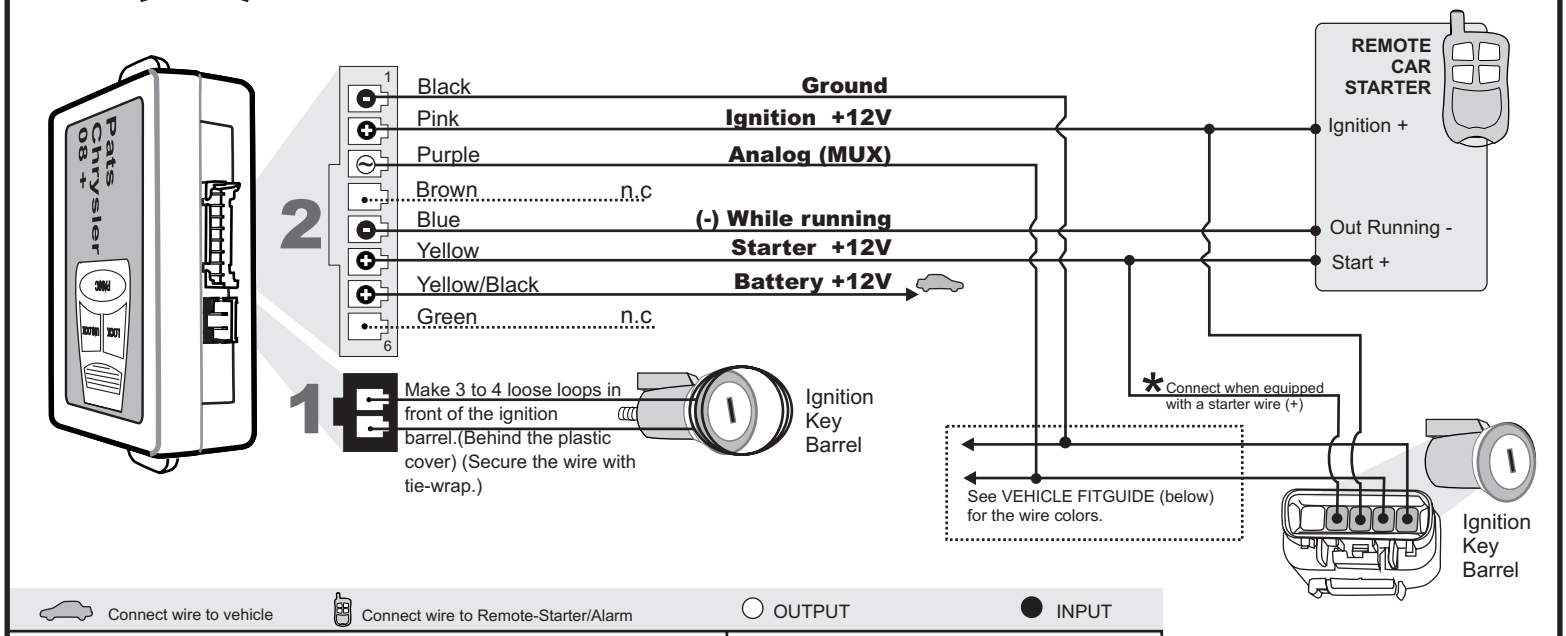

Connect wire to vehicle | Connect wire to Remote-Starter/Alarm | ○ OUTPUT | ● INPUT

WARNING : Do not attempt to start the vehicle with an unprogrammed PATS more than 4 times or the vehicle may lock itself for several hours. After each failed start, start the vehicle once with a valid key.

IMPORTANT : You can program the module only one time. Once this PATS is programmed, it can't be programmed or used for any other vehicle.

PROGRAMMING INSTRUCTIONS

1

Two (2) functional keys required for programming. Insert the first key into the ignition switch and turn the **Ignition ON** for **10 seconds.**

2 

Turn the key **OFF** and remove the first key.

3 

Insert the second key and turn the **ignition ON** for **10 seconds**.

4 

Turn the key **OFF** and remove the first key.

You have 60 seconds to complete the following procedure

5 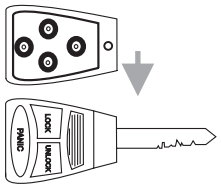

Remove back cover and internal circuit (Circuit Board) from key-remote (as battery replacement).

Place the **empty** key-remote (without circuit board) against PATS CHRYSLER 08+ as show on box label.

Keep both pieces together and insert this key-remote into the ignition switch and **turn them both** to the **ON position**.

6 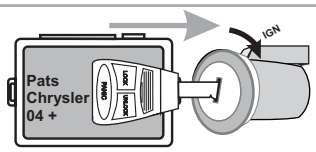

After 15 seconds, a **chime** will sound. The **SECURITY** light or Check engine will stop flashing, turn the ignition OFF and remove the key. If the programming fails wait 3 to 5 minutes before trying the programmation again

- **The PATS module is now programmed.**
- Reassemble the key.

VEHICLE FIT GUIDE

VEHICLES	YEARS						WIRE COLORS	
Chrysler	03	04	05	06	07	08	ANALOG(MUX)	GROUND
Sebring					●	●	Purple/Brown	Black

VEHICLES	YEARS						WIRE COLORS	
Dodge	03	04	05	06	07	08	ANALOG(MUX)	GROUND
Avenger						●	Purple/Brown	Black

TECHNICAL SUPPORT / INFORMATION

Neither the manufacturer or distributor of this module is responsible of damages of any kind indirectly or directly caused by this module, except for the replacement of this module in case of manufacturing defects. This module must be install by qualified technician. This instruction guide may change without notice. Visit www.ifar.ca to get latest version.

Technical support:
TEL: 514-255-HELP (4357)
FAX: 514-255-1367
Web: www.ifar.ca

FORTIN ELECTRONIC SYSTEMS

PATS CHRYSLER 08+

Copyright © 2007, FORTIN AUTO RADIO INC TOUS DROITS RÉSERVÉS

GUIDE D'INSTALLATION

Fabriqué au Canada - Rev.A - 11 / 12 / 2007
Site Internet: http://www.ifar.ca

MODULE DE CONTOURNEMENT DE TRANSPONDEUR, COMMANDE DE CLÉ ET CONTRÔLE D'ALARME D'ORIGINE

FORTIN ELECTRONIC SYSTEMS

CHRYSLER

COMMENCEZ ICI

CÂBLAGE / GUIDE DE CONNECTION

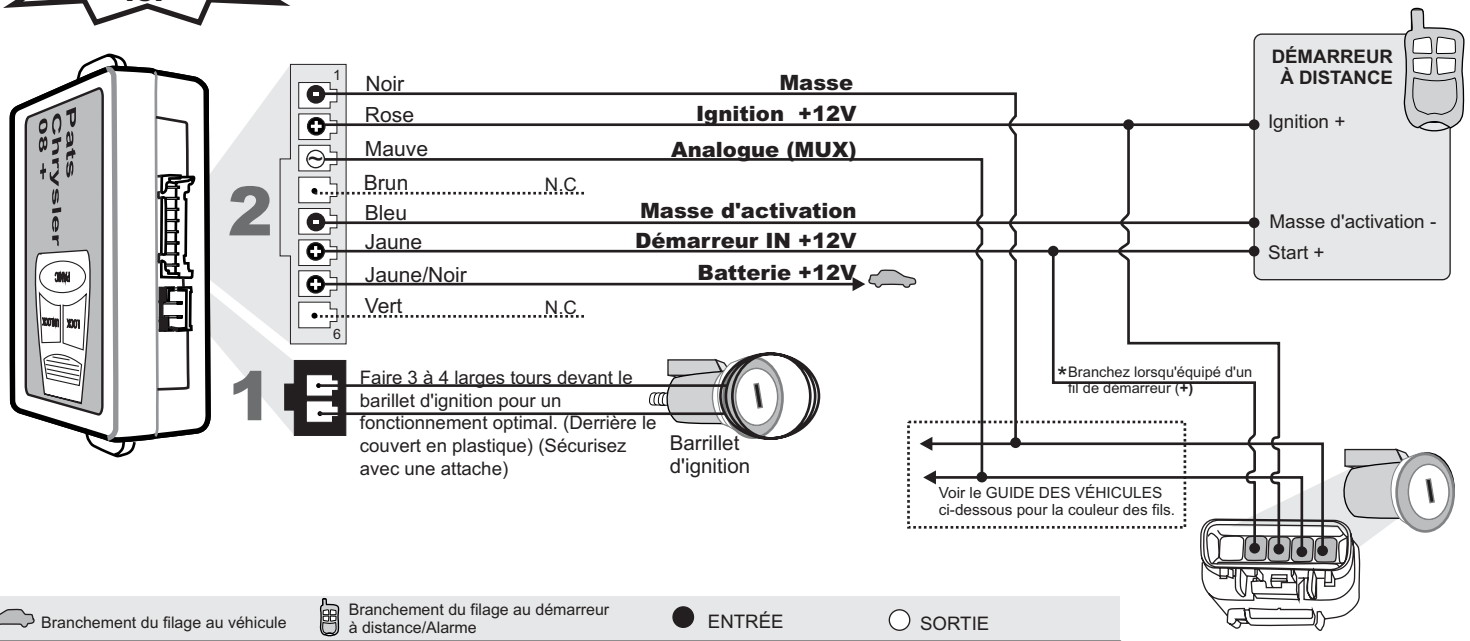

Branchement du filage au véhicule — Branchement du filage au démarreur à distance/Alarme — ● ENTRÉE — ○ SORTIE

ATTENTION : Ne pas tenter de démarrer le véhicule plus de 4 fois consécutif avec un PATS non programmé. Sans quoi le véhicule ne sera plus en mesure de démarrer pour plusieurs heures. Après chaque tentative de démarrage avec un PATS non programmé redémarrez le véhicule avec une clé valide pour remettre à zéro.

IMPORTANT : Pats Chrysler 04+ programmé, il ne peut être programmée ou utilisé sur un autre véhicule.

INSTRUCTIONS DE PROGRAMMATION

1



Deux (2) clés fonctionnelles sont nécessaires pour la programmation. Introduisez **la première clé** dans le contact et placez-la à la position **ON pendant 10 secondes.**

2



Coupez le contact et retirez la clé.

3



Introduisez la **deuxième (2) clé fonctionnelle** dans le contact et placez-la à **ON dans les 10 secondes** qui suivent.

4



Coupez le contact et retirez la clé.

VOUS AVEZ 60 SECONDES POUR EFFECTUER LES ÉTAPES SUIVANTES.

5

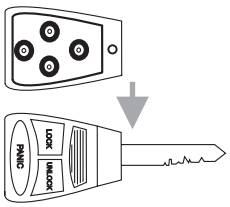

Enlevez le couvercle arrière avec le circuit interne d'une des clés-télécommandes (comme lors de changement de pile).

6

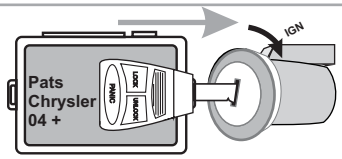

Placez la clé-télécommande vide (sans circuit interne) **contre le Pats Chrysler 08+** comme indiqué sur l'étiquette de celui-ci.

Maintenir les 2 pièces côte à côte en introduisant la clé-télécommande dans le contact et **tournez**-les à la position **ON**.

- **Après 15 secondes** le témoin **SECURITY (ou Check Engine)** cessera de clignoter et une tonatlité se fera entendre. Tournez l'ignition en position OFF et retirez la clé. Si la programmation échoue, attendre 3 à 5 minutes avant de recommencer la procédure.
- **Le Pats Chrysler 04+ sera programmé.**
- Refermez le couvercle arrière avec son circuit interne de la clé-télécommande.

GUIDE DES VÉHICULES

VEHICLES	YEARS						WIRE COLORS	
Chrysler	03	04	05	06	07	08	ANALOG(MUX)	GROUND
Sebring					●	●	Purple/Brown	Black

VEHICLES	YEARS						WIRE COLORS	
Dodge	03	04	05	06	07	08	ANALOG(MUX)	GROUND
Avenger						●	Purple/Brown	Black

INFORMATIONS / SUPPORT TECHNIQUE

Ni le manufacturier, ni le distributeur ne se considèrent responsables des dommages causés ou ayant pu être causés, indirectement ou directement, par ce module, excepté le remplacement de ce module en cas de défectuosité de fabrication. Ce module doit être installé par un technicien qualifié. Ce guide d'instruction peut faire l'objet de changement sans préavis. Consultez le www.ifar.ca pour voir la plus récente version.

Support Technique:
TEL: 514-255-HELP (4357)
FAX: 514-255-1367
Web: www.ifar.ca

FORTIN ELECTRONIC SYSTEMS